

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
220	As of 09/2002	AB	√	√	√	√			
		CGW	√	√	√			√	
		SDS	√	√	√				
		CDI3	√	√	√	√	√	√	
		DS_LF	√	√	√	√	√		
		DS_RF	√	√	√	√	√		
		DSP	√	√	√	√	√	√	√
		RevETR-LF	√	√	√	√			
		RevETR-RF	√	√	√	√			
		DTR	√	√	√	√			√
		OCP	√	√	√	√	√	√	√
		UCP	√	√	√	√	√	√	
		STH	√	√	√	√	√		
		ETC	√	√	√	√	√		
		AB	√	√	√	√			
		CGW	√	√	√			√	
		SDS	√	√	√				
		ESM	√	√	√	√			
		EIS	√	√	√	√			
		BCM	√	√	√	√			
		HRA	√	√	√	√	√	√	
		SUSPENSION	√	√	√	√	√	√	√
		HS	√	√	√	√	√	√	
		LCP	√	√	√	√	√	√	
		UCP	√	√	√	√	√	√	



## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		WSS	√	√	√	√			
		REVETR-LF	√	√	√	√			
		REVETR-RF	√	√	√	√			
		XALWA-L	√	√	√	√	√		
		XALWA-R	√	√	√	√	√		
		AHE	√	√	√	√	√	√	
		SVMCM	√	√	√	√			
		On-Board	√	√	√		√	√	
		ASSYST_PLUS	√	√	√	√		√	
		DS-LF	√	√	√	√	√		
		DS-RF	√	√	√	√	√		
		DSP	√	√	√	√	√	√	
		TLC	√	√	√	√	√	√	
		RWT	√	√	√	√	√	√	
		REDC	√	√	√	√	√	√	
		ARWT	√	√	√	√	√		
		LAE	√	√	√	√		√	
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				



## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
203	As of 09/2003	SVMCM	√	√	√	√			
		SCM	√	√	√	√	√		
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RL	√	√	√	√			
		ESA-DRIVER	√	√	√	√	√	√	
		ESA-PASS	√	√	√	√	√	√	
		DCM-RR	√	√	√	√			
		AAC	√	√	√	√	√	√	
		STH	√	√	√	√			
		WSS	√	√	√	√			
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
AVEH	√	√	√						
PTS	√	√	√		√	√			
AB	√	√	√		√				

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
215	As of 09/2002	CGW	√	√	√			√		
		DTR	√	√	√	√		√		
		OCP	√	√	√	√	√	√	√	
		UCP	√	√	√	√	√	√		
		STH	√	√	√	√				
		ETC	√	√	√	√				
		SDS	√	√	√					
230	As of 09/2003	AB	√	√	√	√				
		CGW	√	√	√			√		
		SBC	√	√	√	√			√	
		ME2.7.2	√	√	√	√	√	√	√	
		ETC	√	√	√	√				
		ME9.7	√	√	√	√	√	√	√	
		DTR	√	√	√	√			√	
		ESP	√	√	√	√	√	√	√	
		ABC	√	√	√	√				
		TPC	√	√	√	√				
		WSS	√	√	√	√				
		ICM	√	√	√	√	√	√	√	
		SDS	√	√	√					
		ME9.7	√	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	√	
		AB	√	√	√	√				
		ETC	√	√	√	√				
		DR-SAM	√	√	√	√				

## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		PASS-SAM	√	√	√	√			
		REAR-SAM	√	√	√	√			
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RR	√	√	√	√			
		DCM-RL	√	√	√	√			
		AAC	√	√	√	√	√	√	
		ESM	√	√	√	√			
		EIS	√	√	√	√			
		UCP	√	√	√	√	√		
		HRA	√	√	√	√	√		
		SBC	√	√	√	√		√	
		PTS	√	√	√	√	√	√	
		ESA-DR	√	√	√	√	√	√	
		ESA-PASS	√	√	√	√	√	√	
		AIRMATIC	√	√	√	√		√	
		CGW	√	√	√			√	
		SDS	√	√	√				
		HS	√	√	√	√	√		
		LCP	√	√	√	√	√		
		OCP	√	√	√	√	√		
		SCM	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		ASSYST	√	√	√	√		√	
		ASSYST-PLUS	√	√	√	√		√	

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	MODEL	DTR	√	√	√	√		√	
		ME9.7(AMG)	√	√	√	√	√	√	
		MED9.7	√	√	√	√	√	√	
		ABR	√	√	√	√	√	√	
		TPC	√	√	√	√			
		WSS	√	√	√	√			
		REVETR_LF	√	√	√	√			
		REVETR_RF	√	√	√	√			
		BCM	√	√	√	√			
		On-Board	√	√	√		√	√	
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		DS_LF	√	√	√		√		
		DS_RF	√	√	√		√		
		DSP	√	√	√		√	√	





## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
164	ALL MODEL	CDI5	√	√	√	√	√	√	
		VG	√	√	√	√			
		HAQ	√	√	√	√			
		DTR	√	√	√	√		√	
		Airmatic	√	√	√				
		TPC	√	√	√	√			
		WSS	√	√	√	√			
		REVETR_LF	√	√	√	√	√		
		REVETR_RF	√	√	√	√	√		
		KG	√	√	√	√	√		
		XALWA-R	√	√	√	√			
		UCP	√	√	√	√	√	√	√
		ASSYST_PLUS	√	√	√	√	√		√
		CM	√	√	√	√			√
		PTS	√	√	√	√	√		√
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
NAVI	√	√	√						
TV	√	√	√						
NAVI(USA)	√	√	√						
TELEAID	√	√	√						

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		REDC	√	√	√		√	√	
		ESA_DRIVER	√	√	√	√	√	√	
		ESA_PASS	√	√	√	√	√	√	
		DS_LF	√	√	√	√	√		
		DS_RF	√	√	√	√	√		
		DSP	√	√	√	√	√	√	
		HS	√	√	√	√	√		
		RFK	√	√	√	√			
		STH	√	√	√	√			
		HSW	√	√	√	√	√	√	
		AAC	√	√	√	√	√	√	
		FCVT	√	√	√	√			
		ESM	√	√	√	√			
		ME-SFI	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		ES	√	√	√				
		AB	√	√	√	√			
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		XALWA-L	√	√	√	√	√		
		XALWA-R	√	√	√	√	√		
		UCP	√	√	√	√	√		
		IC	√	√	√	√	√	√	

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
245	ALL MODEL	ASSYST	√	√	√	√		√		
		ASSYST-PLUS	√	√	√	√		√		
		SCM	√	√	√	√	√			
		PTS	√	√	√	√			√	
		DCM-FL	√	√	√	√				
		DCM-FR	√	√	√	√				
		DCM-RL	√	√	√	√				
		DCM-RR	√	√	√	√				
		ATA	√	√	√					
		OCP	√	√	√	√	√			
		SAM	√	√	√	√				
		CDIA1	√	√	√	√	√	√	√	
		AHE	√	√	√	√	√	√	√	
		SVMCM	√	√	√	√	√			
		CM	√	√	√				√	
		AGW	√	√	√					
		CDC	√	√	√					
		CTEL	√	√	√					
		COMAND/ AUDIO	√	√	√					
		VCS	√	√	√					
		NAVI	√	√	√					
TV	√	√	√							
NAVI(USA)	√	√	√							
TELEAID	√	√	√							

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√	√	√	√	
171	ALL MODEL	ETC	√	√	√	√			
		ESM	√	√	√	√			
		ME97	√	√	√	√	√	√	√
		ESP	√	√	√	√	√	√	√
		AB	√	√	√	√			
		CGW	√	√	√				√
		EIS	√	√	√	√			
		VR	√	√	√	√	√	√	
		HRA	√	√	√	√	√	√	
		OCP	√	√	√	√	√	√	
		UCP	√	√	√	√	√	√	√
		SAM-F	√	√	√	√			
		REAR SAM	√	√	√	√			
		SDS	√	√	√				
		IC	√	√	√	√	√	√	√
		ASSYST	√	√	√	√	√		√
		SCM	√	√	√	√	√	√	
		PTS	√	√	√	√	√	√	√
		DCM-L	√	√	√	√			
		DCM-R	√	√	√	√			
ESA DRIVER	√	√	√	√	√	√	√		
ESA PASSENGER	√	√	√	√	√	√	√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		HS	√	√	√	√	√		
		AAC	√	√	√	√	√	√	
		WSS	√	√	√	√			
		ASSYST_PLUS	√	√	√	√		√	
		TPC	√	√	√	√			
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		HSW	√	√	√	√	√	√	
		ETC	√	√	√	√			
		ME97	√	√	√	√	√	√	
		ISM	√	√	√	√			
		ABR	√	√	√	√	√	√	
		SUSPENSION	√	√	√	√		√	√
		AB	√	√	√	√			
		REVETR-LF	√	√	√	√	√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		REVETR-RF	√	√	√	√	√		
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		KG	√	√	√	√	√		
		XALWA-L	√	√	√	√	√		
		XALWA-R	√	√	√	√	√		
		UCP	√	√	√	√	√		
		OCP	√	√	√	√	√		
		COU	√	√	√	√	√		
		DR-SAM	√	√	√	√			
		REAR SAM	√	√	√	√			
		SDS	√	√	√				
		BNS	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√		
		PTS	√	√	√	√	√	√	
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RL	√	√	√	√			
		DCM-RR	√	√	√	√			
		ESA-FL	√	√	√	√	√	√	
		ESA-FR	√	√	√	√	√	√	
		ESA-R	√	√	√	√	√		
		TLC	√	√	√	√	√		
		C-AAC	√	√	√	√	√	√	

221

ALL  
MODEL

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	MODEL	ME9.7(AMG)	√	√	√	√	√	√	
		FSCU	√	√	√				
		ME2.7.2	√	√	√	√	√	√	
		CDI5	√	√	√	√	√	√	
		FSCU(AMG)	√	√	√				
		SGR	√	√	√	√	√		
		DTR	√	√	√	√		√	
		EFB	√	√	√	√			
		TPC	√	√	√	√			
		WSS	√	√	√	√			
		HBF	√	√	√	√	√		
		AHE	√	√	√	√	√		
		SVMCM	√	√	√	√			
		ASSYST	√	√	√	√		√	
		ASSYST_PLUS	√	√	√	√		√	
		COMAND	√	√	√				
		TUENR	√	√	√				
		CTEL	√	√	√				
		VCS	√	√	√				
		SDAR	√	√	√				
		TV	√	√	√				
		AVEH	√	√	√				
		TELEAID	√	√	√				
		DS_LF	√	√	√		√	√	
		DS_RF	√	√	√		√		



## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		DSP	√	√	√		√		
		MKL_HL	√	√	√	√	√		
		MKL_HR	√	√	√	√	√		
		RFK	√	√	√	√			
		STH	√	√	√	√			
		KBE-H	√	√	√	√	√		
		FCVT	√	√	√	√			
		ESM	√	√	√	√			
		ME-SFI	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		ES	√	√	√				
		AB	√	√	√	√			
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		UCP	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		ASSYST	√	√	√	√		√	
		ASSYST-PLUS	√	√	√	√		√	
		SCM	√	√	√	√	√		
		PTS	√	√	√	√		√	
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RL	√	√	√	√			
		DCM-RR	√	√	√	√			
		ATA	√	√	√				

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
	MODEL	OCP	√	√	√	√	√			
		SAM	√	√	√	√				
		CDIA1	√	√	√	√	√	√		
		AHE	√	√	√	√	√	√		
		SVMCM	√	√	√	√				
		CM	√	√	√					
		AGW	√	√	√					
		CDC	√	√	√					
		CTEL	√	√	√					
		COMAND/ AUDIO	√	√	√					
		VCS	√	√	√					
		NAVI	√	√	√					
		TV	√	√	√					
		NAVI(USA)	√	√	√					
		TELEAID	√	√	√					
		TELEAID(J)	√	√	√					
		AVEH	√	√	√					
		AAC	√	√	√	√	√	√		
				ETC	√	√	√	√		
				ME9.7	√	√	√	√	√	√
ISM	√			√	√	√				
ESP	√			√	√	√	√	√		
AB	√			√	√	√				
CGW	√			√	√			√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
X164	ALL MODEL	EIS	√	√	√	√			
		HRA	√	√	√	√	√		
		OCP	√	√	√	√	√	√	
		REAR-SAM	√	√	√	√			
		SDS	√	√	√				
		SAM-F	√	√	√	√			
		HBF	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√	√	
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		ASSYST	√	√	√	√			√
		VG	√	√	√	√			
		HAQ	√	√	√	√			
		DTR	√	√	√	√	√		√
		Airmatic	√	√	√				
		TPC	√	√	√	√	√		
		WSS	√	√	√	√	√		
		REVETR_LF	√	√	√	√	√	√	
		REVETR_RF	√	√	√	√	√	√	
		KG	√	√	√	√	√	√	
		XALWA-R	√	√	√	√	√		
		UCP	√	√	√	√	√	√	√
ASSYST_PLUS	√	√	√	√	√		√		
CM	√	√	√	√	√		√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		PTS	√	√	√	√		√	
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		REDC	√	√	√	√	√	√	
		ESA_DRIVER	√	√	√	√	√	√	
		ESA_PASS	√	√	√	√	√	√	
		DS_LF	√	√	√	√	√		
		DS_RF	√	√	√	√	√		
		DSP	√	√	√	√	√	√	
		HS	√	√	√	√	√		
		STH	√	√	√	√			
		HSW	√	√	√	√	√	√	
		RFK	√	√	√	√			
		AAC	√	√	√	√	√	√	
	ALL	AB	√	√	√	√			

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
199	W124 MODEL	WSS	√	√	√	√			
		CGW	√	√	√			√	
		AIRMATIC	√	√	√	√		√	
		ETC	√	√	√	√			
		AB	√	√	√	√			
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		HRA	√	√	√	√		√	
		HBF	√	√	√	√		√	
		DR-SAM	√	√	√	√			
		PASS-SAM	√	√	√	√			
		ICM	√	√	√	√		√	√
		SCM	√	√	√	√		√	
		PTS	√	√	√	√		√	√
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RL	√	√	√	√			
		DCM-RR	√	√	√	√			
		ESA-FL	√	√	√	√		√	√
		ESA-FR	√	√	√	√		√	√
		ME2.7.2	√	√	√	√		√	√
		DTR	√	√	√	√			√
FSCU	√	√	√						
SGR	√	√	√	√			√		
TPC	√	√	√	√		√			

## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
240	ALL MODEL	WSS	√	√	√	√			
		BNS	√	√	√	√		√	
		OCP	√	√	√	√	√		
		CRN	√	√	√	√	√		
		VBF	√	√	√	√	√		
		PSE	√	√	√	√	√	√	
		REAR_SAM1	√	√	√	√	√	√	
		REAR_SAM2	√	√	√	√	√	√	
		SDS	√	√	√				
		SVMCM	√	√	√	√			
		ESA_LR	√	√	√	√	√		
		ESA_RR	√	√	√	√	√		
		PWC	√	√	√	√	√	√	
		LDCA	√	√	√	√			
		RDCA	√	√	√	√			
		OSB_FL	√	√	√	√	√		
		OSB_FR	√	√	√	√	√		
		MKL_HL	√	√	√	√	√		
		MKL_HR	√	√	√	√	√		
		REAR_AC	√	√	√	√	√		
		TLC	√	√	√	√	√	√	
		STH	√	√	√	√			
		HSW	√	√	√	√	√	√	
		AGW	√	√	√				
CDC	√	√	√						

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√	√	√	√	
		ETC	√	√	√	√			
		ESM	√	√	√	√			
		ME9.7	√	√	√	√	√	√	
		CDI4	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		EIS	√	√	√	√			
		HRA	√	√	√	√	√		
		REAR-SAM	√	√	√	√			
		OCP	√	√	√	√	√		
		UCP	√	√	√	√	√	√	
		LCP	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note: For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
209	As of 04/2004	PTS	√	√	√	√	√			
		DCM-L	√	√	√	√				
		DCM-R	√	√	√	√				
		ESA DRIVER	√	√	√	√	√	√	√	
		ESA PASS	√	√	√	√	√	√	√	
		ME9.7(AMG)	√	√	√	√	√	√	√	
		DTR	√	√	√	√			√	
		WSS	√	√	√	√				
		SAM_F	√	√	√	√				
		AHE	√	√	√	√		√	√	
		PESA	√	√	√					
		TLC	√	√	√	√	√	√	√	
		STH	√	√	√	√				
		AGW	√	√	√					
		CDC	√	√	√					
		CTEL	√	√	√					
		COMAND/ AUDIO	√	√	√					
		VCS	√	√	√					
		NAVI	√	√	√					
		TV	√	√	√					
		NAVI(USA)	√	√	√					
		TELEAID	√	√	√					
TELEAID(J)	√	√	√							
AVEH	√	√	√							



## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AAC	√	√	√	√			
		ETC	√	√	√	√			
		ME9.7	√	√	√	√	√	√	
		ISM	√	√	√	√			
		CDI4	√	√	√	√	√	√	
		SUSPENSION	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		RevETR-LF	√	√	√	√	√		
		RevETR-RF	√	√	√	√	√		
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		HRA	√	√	√	√	√		
		OCP	√	√	√	√	√	√	
		REAR SAM	√	√	√	√			
		SDS	√	√	√				
		SAM-F	√	√	√	√			
		HBF	√	√	√	√	√		
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√		
		PTS	√	√	√	√		√	
		ASSYST	√	√	√	√		√	
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		HS	√	√	√	√	√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
251	ALL MODEL	ESA DRIVER	√	√	√	√	√	√		
		ESA PASSENGER	√	√	√	√	√	√		
		ME9.7(AMG)	√	√	√	√	√	√	√	
		DTR	√	√	√	√			√	
		TPC	√	√	√	√				
		WSS	√	√	√	√				
		KG	√	√	√	√		√		
		UCP	√	√	√	√		√	√	
		ASSYST_PLUS	√	√	√	√			√	
		CM	√	√	√	√			√	
		REDC	√	√	√	√		√	√	
		DS-LF	√	√	√	√		√		
		DS-RF	√	√	√	√		√		
		DSP	√	√	√	√		√	√	
		STH	√	√	√	√				
		HSW	√	√	√	√		√	√	
		AGW	√	√	√					
		CDC	√	√	√					
		CTEL	√	√	√					
		COMAND/ AUDIO	√	√	√					
VCS	√	√	√							
NAVI	√	√	√							
TV	√	√	√							
NAVI(USA)	√	√	√							

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		RFK	√	√	√	√			
		AAC	√	√	√	√	√	√	
		ETC	√	√	√	√			
		ME9.7	√	√	√	√	√	√	
		ME9.7(AMG)	√	√	√	√	√	√	
		FSCU	√	√	√				
		FSCU(AMG)	√	√	√				
		ME2.7.2	√	√	√	√	√	√	
		ISM	√	√	√	√			
		SGR	√	√	√	√	√		
		DTR	√	√	√	√		√	
		ABR	√	√	√	√	√	√	
		Suspension	√	√	√	√		√	√
		EFB	√	√	√	√			
		TPC	√	√	√	√			
		AB	√	√	√	√			
		WSS	√	√	√	√			
		CGW	√	√	√			√	
		EIS	√	√	√	√			
		KG	√	√	√	√	√		
		XALWA-L	√	√	√	√	√		
		XALWA-R	√	√	√	√	√		

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
216	ALL MODEL	UCP	√	√	√	√	√		
		OCP	√	√	√	√	√		
		COU	√	√	√	√	√		
		HBF	√	√	√	√	√		
		Dr-SAM	√	√	√	√			
		REAR_SAM	√	√	√	√			
		SDS	√	√	√				
		BNS	√	√	√	√	√		
		AHE	√	√	√	√	√		
		IC	√	√	√	√	√		√
		SCM	√	√	√	√	√		
		NSA	√	√	√	√	√		
		PTS	√	√	√	√	√		√
		ASSYST	√	√	√	√	√		√
		ASSYST_PLUS	√	√	√	√	√		√
		COMAND	√	√	√				
		Tuner	√	√	√				
		CTEL	√	√	√				
		VCS	√	√	√				
		SDAR	√	√	√				
		TV	√	√	√				
		AVE-H	√	√	√				
		TELE-AID	√	√	√				
DCM-FL	√	√	√		√				
DCM-FR	√	√	√		√				

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ESA-FL	√	√	√	√			
		ESA-FR	√	√	√	√			
		DS-LF	√	√	√	√	√	√	
		DS-RF	√	√	√	√	√		
		DSP	√	√	√	√	√		
		TLC	√	√	√	√	√		
		C-AAC	√	√	√	√	√	√	
		RFK	√	√	√	√			
		KBE-H	√	√	√	√			
		STH	√	√	√	√			
		ETC	√	√	√	√			
		ME-SFI	√	√	√	√	√	√	√
		CDID	√	√	√	√	√	√	√
		FSCU	√	√	√				
		ABR	√	√	√	√	√	√	√
		TPC	√	√	√	√			
		XALWA_L	√	√	√	√	√		
		XALWA_R	√	√	√	√	√		
		WSS	√	√	√	√			
		AHE	√	√	√	√	√		
		COMAND	√	√	√				
		SDAR	√	√	√				
		TELEAID	√	√	√				
		ESA_DRIVER	√	√	√	√	√	√	
ESA_PASS	√	√	√	√	√	√			

## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions								
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others		
204	ALL MODEL	EIS	√	√	√	√					
		PTS	√	√	√	√	√	√			
		CGW	√	√	√	√			√		
		ICM	√	√	√	√	√	√	√		
		ESM	√	√	√	√					
		SCM	√	√	√	√	√	√			
		COU	√	√	√	√	√	√			
		RevETR-LF	√	√	√	√					
		RevETR-RF	√	√	√	√					
		DCM-FL	√	√	√	√					
		SVS-VL	√	√	√						
		DCM-FR	√	√	√	√					
		SVS-VR	√	√	√						
		DCM-RL	√	√	√	√					
		DCM-RR	√	√	√	√					
		AAC	√	√	√	√	√	√	√	√	
		AB	√	√	√	√	√				
		DR-SAM	√	√	√	√	√				
		FSW,AIS,RLS,OBF,LDS, WBS	√	√	√						
		SUSPENSION	√	√	√						
		KG	√	√	√	√	√	√	√		
		REAR SAM	√	√	√	√	√				
OCP	√	√	√	√	√	√	√	√			
MSS	√	√	√	√	√						



## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
463 (16PIN)	AS 01 (From 09/2006 to 02/2007)	SVMCM(MSS)	√	√	√	√			
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√		
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		ESA_DRIVER	√	√	√	√			
		ESA_PASS	√	√	√	√			
		AAC	√	√	√	√	√	√	
		STH	√	√	√	√			
		ALWR	√	√	√				
163	As of	EIS	√	√	√	√			
		UCP	√	√	√	√	√	√	
		SAM-F	√	√	√	√			
		REAR_SAM	√	√	√	√			
		AHE	√	√	√	√	√		
		OCP	√	√	√	√	√	√	
		SVMCM(MSS)	√	√	√	√			
		IC	√	√	√	√	√	√	
		SCM	√	√	√	√	√		
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		ESA_DRIVER	√	√	√	√			
		ESA_PASS	√	√	√	√			
		AAC	√	√	√	√	√	√	
		STH	√	√	√	√			



## Mercedes Benz V44.40 CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
403 (16PIN)	W201 03/2007	ALWR	√	√	√				
		ETC	√	√	√	√			
		CDI4	√	√	√	√	√	√	√
		TPC	√	√	√	√			
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
AVEH	√	√	√						

(\*):Tested;

(?):Manual on website([www.x431.com](http://www.x431.com))

Note:All description rights reserved by LAUNCH TECH. CO.,LTD