

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		ENGINE AND ECT	√	√	√	√	√	√	1.Check Mode 2.Reset Memory 3.DPF Deterioration Record Clear 4.A/F Sensor Compensation Reset 5.Crank Time Compensation Reset 6.Catalyst Record Clear 7.Auxiliary pump adaptation initialization 8.Vehicle Mileage Write 9.Deceleration Sensor 0 Point Calibration 10.Electric Throttle Learning 11.Read VIN Code 12.Mode changes 13.Evaporative System Check 14.G sensor Zero point learning 15.Auxiliary pump adaptation initialization 16.Injector Compensation 17.Cruise control initialization 18.AT correction initialization 19.Engine control initialization 20.The acceleration sensor zero po 21.The CVT oil pressure adaptation 22.Injector correction (read/save ID 23.Injector correction (check the c	

## Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							Others
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	
									24.Check the injector classification 25.Set injector classification 26.Operations related to filter (ford) 27.Operations related to filter (diff) 28.A/F Sensor Compensation Reset 29.Engine setting change 30.CVT fluid pressure learn	

# Lexus V10.30 Diagnostics List (Note:For reference only)

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		ECT		✓	✓	✓	✓	✓	1.Check Mode 2.A/T Code Reset 3.Reset Memory 4.Mode changes(现在没有) 5.AT Code Manual register(Japan) 6.AT Code Auto register(Japan) 7.AT Code READ&Save(Japan)	
		Cruise Control		✓	✓	✓				
		Engine(LH Bank)		✓	✓	✓	✓	✓	1.Check Mode 2.Reset Memory	
		Engine(RH Bank)		✓	✓	✓	✓	✓	1.Check Mode 2.Reset Memory	
		HV Battery		✓	✓	✓	✓	✓	1.Battery control data initialization 2.Initialization 3.Onboard Equalizing Charge	
		Hybrid Control		✓	✓	✓	✓	✓	1.Initialization 2.Reset Memory 3.Read VIN Code 4.Mode changes 5.Service mode 6.battery control data initialization 7.Inspection Mode 8.Initialization	

# Lexus V10.30 Diagnostics List (Note:For reference only)

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		ABS/VSC/TRC		✓	✓	✓	✓	✓	1.Reset Memory 2.Test Mode 3.Inspection Mode 4.Mode changes 5.Service mode 6.The yaw rate/G sensor zero point reset (for ECB) 7.Linear pump adaptation initialization 8.Clear the backup memory 9.Air Bleeding 10.Accumulator Zero Down Drive 11.Accumulator Zero Down Drive(rear) 12.Signal Check) 13.AIR BLEED 14.ECB Utility 15.ES Calibration	
		AHC		✓	✓	✓	✓			
		AIR SUSPENSION		✓	✓	✓	✓		1.Mode changes (现在没有) 2.Signal Check	
		FREE TRONIC		✓	✓	✓	✓	✓	1.Air Bleeding 2.PARTS EXCHANGE(*)( 3.Pressure Release	

# Lexus V10.30 Diagnostics List (Note:For reference only)

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		Tire Pressure Monitor		✓	✓	✓			1.ID Registration(1.Main Set 2.2nd Set) 2.Main transmitter ID registration 3.Sub transmitter ID registration 4.Signal Check	
		VGRS		✓	✓	✓		✓	1.Abnormal Operation History 2.Steering Angle Adjust 3.Mode changes 4.Actuator angle neutral compensation 5.System lock 6.System unlocking 7.Clear the driving light fault counter 8.Signal Check	
		Stabilizer		✓	✓	✓			1.Clear the backup memory 2.Mode changes 3.Stabilizer System Check	
		Intelligent Parking		✓	✓	✓				
		Electric Parking Brake		✓	✓	✓	✓	✓	1.Clear the backup memory	
		Lane Keeping Aisst		✓	✓	✓				
		Front Stabilizer		✓	✓	✓	✓			
		Rear Stabilizer		✓	✓	✓	✓			
		ARS		✓	✓	✓			1.Mode changes	
		PPS		✓	✓	✓				
		AFS		✓	✓	✓	✓			
		AIR CONDITIONER		✓	✓	✓	✓		1. Servomotor Initialization	
		BACK DOOR		✓	✓	✓	✓			

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
	BODY			✓	✓	✓	✓		1.Wireless Code Registration,(*) 2.Wireless Code Erasure(*)(?) 3. ECU link message initialization	
	BODY2			✓	✓	✓	✓			
	BODY NO3					✓	✓			
	BODY NO4			✓	✓	✓	✓			
	BODY NO5			✓	✓	✓	✓			
	CLEARANCE SONAR			✓	✓	✓	✓	✓	1. Steering wheel adjustment	
	COMBI SW					✓				
	D-DOOR			✓	✓	✓	✓			
	D-SEAT			✓	✓	✓	✓			
	GATEWAY			✓	✓	✓			1. Initialization	
	MIRROR					✓	✓			
	MIRROR-L					✓	✓			
	MIRROR-R					✓	✓			
	OCCUPANT DETECT			✓	✓	✓			1. Zero Point Calibration	
	P-DOOR			✓	✓	✓	✓			
	P-SEAT			✓	✓	✓	✓			
	PWR SOURCE CTRL			✓	✓	✓	✓			
	RAIN SENSOR			✓	✓	✓				
	REAR-SEAT SW					✓				
	RL-DOOR MOTOR			✓	✓	✓	✓			
	RL-SEAT					✓	✓			
	RR-DOOR MOTOR			✓	✓	✓	✓			
	RR-SEAT					✓	✓			
	SLIDE ROOF			✓	✓	✓	✓			
	SRS AIRBAG			✓	✓	✓			1.CHECK MODE(*)(?) 2.Mode changes	

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
BODY	BODY	STEERING PAD				✓				
		TILT&TELESCO		✓	✓	✓	✓	✓		
		WIPER				✓	✓			
		Main Body		✓	✓	✓	✓		1.Initialization 2.Wireless Code Erasure 3.Wireless Code Registration 4.ECU link message initialization	
		Tvss		✓	✓	✓	✓			
		Entry&Start		✓	✓	✓	✓	✓	1.Key Code Registration (*) (?) 2.Key Code Erasure(*) (?) 3.Initialization 4.Communication Check(Key Diag Mode) 5.ECU Communication ID Registration 6.Key Code Registration 3.1	
		Master Switch		✓	✓	✓	✓			
		HV Gateway		✓	✓	✓			1. Initialization	
		Night View		✓	✓	✓	✓		1.Camera angle adjustment	
		HL AutoLeveling		✓	✓	✓	✓		1. Height Sensor Initialization	
		Gateway BEAN		✓	✓					
		Accessory Gateway		✓	✓	✓				
		Front Left Seat A/C		✓		✓	✓			
		Front Right Seat A/C		✓		✓	✓			
		Gateway CAN		✓	✓				1. Initialization	
		ECM Gateway		✓	✓	✓			1. Initialization	
		ECB Gateway		✓	✓	✓			1. Initialization	
		WIL Gateway		✓	✓	✓			1. Initialization	

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		Center Console Switch			✓	✓				
		Rear Console Switch		✓	✓	✓	✓			
		Rear Left Seat A/C		✓		✓	✓			
		Rear Right Seat A/C		✓		✓	✓			
		Electric Power Control		✓	✓	✓	✓	✓		
		Active Headrest R		✓	✓	✓	✓			
		Active Headrest L		✓	✓	✓	✓			
		Combination Meter		✓	✓	✓	✓			
		Theft Deterrent		✓	✓	✓	✓		1.Communication Check(Key Diag Mode) 2.Key Code Erasure 3.Key Code Registration 4.Key Number Change 5.Key Number Registration 6.Wireless Code Registration 7.Wireless Code Erasure 8.Wireless Door Lock Diagnosis Mode	
		Pre-Crash		✓	✓	✓	✓		1.Optical axle adjustment	
		Pre-Crash 2		✓	✓	✓	✓		1. Initialization	
		PM1 Gateway		✓	✓	✓			1. Initialization	
		PM2 Gateway		✓	✓	✓			1. Initialization	
		Charging Control		✓	✓	✓	✓			
		Night		✓	✓	✓	✓			
		Romote Security		✓	✓	✓	✓			
		CAN bus Gateway		✓	✓	✓				
		Remote Generator				✓				
		Powertrain Gateway2		✓	✓	✓				

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions							
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions	Others
		Pedal			✓	✓				
		Radar Cruise		✓	✓	✓			1.Laser/Radar Cruise Initialization	
		Front Left Door		✓	✓	✓	✓			
		Front Right Door		✓	✓	✓	✓			
		Telematic		✓	✓	✓				
		P Master Switch		✓	✓	✓	✓			
		Blind Spot Monitor R		✓	✓	✓				
		Blind Spot Monitor L		✓	✓	✓				
		Active Rear Wing								
		Transmission Control		✓	✓	✓		✓		
	ANTI THEFT	IMMOBILISER							1.Transponder Code Registration 2.Transponder Code Erasure 3.Auto Reg Closure 4.Auto Registration Closure 5.Key Code Erasure 6.Key Code Registration 7. ECU Communication ID Registration 8.Key Number Change 9.Key Number Registration 10.Transponder Code Erasure 2 11.Transponder Code Registration 2	
				✓	✓	✓	✓			

# Lexus V10.30 Diagnostics List

(Note:For reference only)

Connector	Module	Systems	Functions								Others
			Sys.Info	Read Dtc	Clear Dtc	Data stream	Actuation	FREEZE	Special functions		
		steering lock		√	√	√	√		1. ECU Communication ID Registration 2. Transponder Code Registration 3. Transponder Code Erasure 4. Key Number Change 5. Key Number Registration		
TOYOTA-17 (17PIN)	ENGINE			√	√	√					
	SRA AIR BAG			√	√						
	ECT			√	√						
	ABS			√	√						
	CCS			√	√						
	AIR SUSPENSION			√	√						
TOYOTA-17F OR TOYOTA-22	ENGINE			√	√	√					
	SRA AIRBAG			√	√						
	ABS(available for TOYOTA-22 )			√	√						

(\*):Tested;

(?):Manual on website([www.x431.com](http://www.x431.com))

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

<b>CONNECTOR</b>	<b>X431</b>	<b>DIAGUN</b>
SMART OBD	N/A	N/A
OBD 16C	N/A	N/A
CANBUS II	It is available for the 16PIN DLC.	N/A
diagun connector	N/A	It is available for the 16PIN DLC.
SUPER 16	It is available for 16PIN DLC.	N/A
TOYOTA-17	It is available for 17PIN TOYOTA-17 DLC.	N/A
TOYOTA-17F OR TOYOTA-22	It is available for 17PIN TOYOTA-17F or 22PIN DLC.	N/A