

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
106	Additional heating		√	√	√	√	√	
106REMODELAGE	Petrol engine	CDY BOSCH MA3.1	√	√	√			
		CDZ BOSCH MA3.1	√	√	√			
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
	NFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation	
	Additional heating		√	√	√	√	√	
107	AT	controlled manual gearbox(MMT)				√		
		Power steering	√	√	√	√		
	Petrol engine	KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration
	Diesel engine	8HX SID 806 DV4	√	√	√	√	√	1.Configuration
		8HZ SID 806 DV4	√	√	√	√	√	1.Configuration

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 CAN	Diesel Engine	9HT BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
	ABS	ABS MK70.1	√	√	√	√		
		ESP MK60-O	√	√	√	√		
	Airbag ECU	Airbag ECU	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		1.Configuration
	Inform the driver/Audio/Communication	Multi-function display						
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
Telematics		√	√	√	√	√	1.Configuration	
	NFU ME744	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 VAN	Petrol engine	KFV S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFU MM6LP	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	8HZ SIEMENS SID 804	√	√	√	√	√	1.Configuration
		8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√		
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	Air bag	Airbag ECU	√	√	√	√		
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Telematics RT3	√	√	√	√	√	1.Configuration
		Multi-function display EMF	√	√	√	√		
		CD player	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFR MM48P	√	√	√	√	√	1.Initialization Adapation
		N6A BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Program design/Mtich
		NFU BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Program design/Mtich
		N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		N6A BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		KFX MM1AP	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adapation

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206	Petrol engine	HFZ MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Injection ECU initialisation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Injection ECU initialisation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapatation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapatation
		K6C MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Injection ECU initialisation
		HFX MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		1.Initialization Adapatation
		7LZ MM5NP	√	√	√			
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFW J34P	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFU J35	√	√	√	√	√	1.Configuration
WJY LUCAS DCN2	√	√	√	√	√	1.Configuration		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	WJZ LUCAS DCN2	√	√	√	√		
		8HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Marching 2.air bleed
		ESP MK60	√	√	√	√		
		Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marching 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
		Electric pump unit(power steering)	√	√	√	√		
	IP	Instrument panel	√	√	√	√	√	1.Marching
		BSI	√	√	√	√	√	1.Initialization Adaption 2.key program
A/C	Air conditioning	√	√	√	√	√	1.Configuration	
	Alarm	√	√	√	√	√	1.Configuration	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
	Driver information	Display/Telematics	√	√	√	√	√	1.Marchting
		on-board navigation system	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD Player	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√			1.Marchting 2.lock and unlock
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
Left Air bag	Left side airbag	√	√	√			1.Marchting	
Right Air bag	Right side airbag	√	√	√			1.Marchting	
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	K6C MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		K6D SAGEM S2000	√	√	√	√		
		KFU MM6LP	√	√	√	√		
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW J34P	√	√	√	√	√	1.Configuration
		KFW SAGEM S2000	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.4FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.4	√	√	√	√		
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU J35	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFZ BOSCH MP7.2	√	√	√	√	√	
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 MUX		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
	Diesel engine	8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	AT	AL4 automatic gearbox	√	√	√	√		
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		Anti-lock brakes MK70	√	√	√	√		
		Anti-lock brakes TEVES	√	√	√	√		
		ESP MK60	√	√	√	√		
	Air bags	Air bags	√	√	√	√		
A/C	Air conditioning	√	√	√	√	√	1.Configuration	
	Alarm	√	√	√	√	√	1.Configuration	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
	Driver information/Communication	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
	Electric pump unit(power steering)	√	√	√	√			
206 +	Petrol engine	KFW J34P	√	√	√	√	√	1.Configuration
	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Active safety	Anti-lock brakes MK70	√	√	√	√		
		ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√		
		Air-bag	√	√	√	√		
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Display/Telematics	√	√	√	√	√	1.Configuration	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
	Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√		
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		MEV17.4 EVO	√	√	√	√	√	1.Configuration
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207CAN	Diesel engine	9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		9HY BOSCH EDC16C3	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		8HZ BOSCH EDC16C3 EURO4	√	√	√			
		9HY BOSCH EDC16C3 EUR04 (CAN)	√	√	√	√		
		Multiplexed additive adding pump ECU	√	√	√			
	AT ECU	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		colltrolled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	ABS	ABS MK70.1	√	√	√			
		ESP MK60-O	√	√	√			
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		Telamatics	√	√	√	√	√	1.Configuration
		Warning light showing seat belt not fastened	√					
		Vehicle protection/Management of accesses	Alarm	√	√	√		
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
		Driving school module	√	√			√	
		Static AFS	√	√	√			
	Petrol engine	KFW J34P	√	√	√	√	√	1.Configuration
	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207 VAN	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapation 3. Oil wear counter
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Inform the driver/Audio/Communication	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√		
		Air bags	√	√	√	√		
	Rain/brightness sensor	√	√	√				
Diesel engine	5FX MED17.4	√	√	√	√			
	9HZ EDC16C3	√	√	√	√	√	1.Configuration	
	DCM3.5	√	√	√	√	√	1.Configuration 2.Filter	
	CFC300P gearbox	√	√	√	√	√		
	AT ECU	AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
3008		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Vehicle protection/Management of	Alarm	√	√	√	√	√	1.Configuration
		Driver's door control panel	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Telematics	√	√	√	√	√	1.Configuration
	Driving assistance/Comfort	Air conditioning	√	√	√	√	√	1.Configuration
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
306	Petrol engine	HDY BOSCH MA3.1	√	√	√			
		KFX MM1AP	√	√	√	√		
		HDZ BOSCH MA3.1	√	√	√			
		RFS MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFX MM1AP	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
306REMODELAGE	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		NFT BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFV BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFS MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 Gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
	Petrol engine	NFU BOSCH ME744	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1..Initialization Adaption	
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adaption	
		RFK MM6LP	√	√	√	√		1.Initialization Adaption	
	RFN MM6LP	√	√	√	√		1.Initialization Adaption		
			RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
			RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
			9HY BOSCH EDC16C3	√	√	√	√		
			RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 VAN	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		8HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		9HX BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
	ABS	TEVES MK60 ABS	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP BOSCH 5.7	√	√	√	√	√	
		ABS BOSCH 5.3	√	√	√	√	√	
		ESP BOSCH 8	√	√	√	√		
	A/T	BVA AL4	√	√	√	√	√	1.Marching 2.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
	Air bag	SAC CENTRAL	√	√	√	√		
		SAC CENT SIEMENS	√	√	√			1.Marching
	Driver information	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		parking assistance	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	1.Configuration

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
	switch control	Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marchting
		Electric pump unit(power steering)	√	√	√	√		
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√	√	1.Marchting 2.key program
A/C	Air conditioning	√	√	√	√	√	1.Configuration	
	Petrol engine	N6A BOSCH ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		NFU BOSCH ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		
		N6B BOSCH_ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		KFU MM6LP	√	√	√	√		
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFJ MM6LPB	√	√	√			

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 CAN		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_Or_N6B_ME749	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_ME749_FLEX_FUEL	√	√	√			
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
	Diesel engine	RHY_BOSCH_EDC15C2	√	√	√	√		
		RHZ_BOSCH_EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		9HV_BOSCH_EDC16C3	√	√	√		√	1.Configuration
		9HX_BOSCH_EDC16C3	√	√	√	√		
		9HY_BOSCH_EDC16C3_EURO	√	√	√			
		9HY_BOSCH_EDC16C3_EURO4	√	√	√			
		9HZ_BOSCH_EDC16C3	√	√	√			1.Configuration
		RHR_SIEMENS_SID_803	√	√	√	√		
		RHL_SIEMENS_SID_803	√	√	√	√		
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter		
9HT BOSCH EDC16C3	√	√	√	√				

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	AT ECU	AM6L4 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		BSI	√	√	√	√		1.keys of programming
	Active and passive safety	ABS8 BOSCH	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP8 BOSCH	√	√	√			
		Airbag ECU	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Power steering	√	√	√	√		
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Telamatics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
Retractable roof		√	√	√				

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting/Signalling	Sun roof	√	√	√			
		Rain/Brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√			
		Left headlamp beam level corrector	√	√	√			
		Driving school module	√	√			√	
		Steering wheel switching module	√	√	√	√		
	Petrol engine	BSI	√	√	√			
		5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
308		NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFJ MM6KP Bio Flex(EW10A FF)	√	√	√			
		RFJ MM6LPB	√	√	√			
	Diesel engine	9HV EDC16C3	√	√	√		√	1.Configuration
		9HX EDC16C3	√	√	√	√		
		9HY EDC16C3	√	√	√	√		
		9HZ EDC16C3	√	√	√	√		
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
	A/T	CFC300P gearbox	√	√	√	√	√	
		AM6C gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		AL4 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Multiplexed additive adding pump	√	√	√			
	Vehicle protection / Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
	Air bag	Air-bag	√	√	√			
	Driving assistance/comfort	Lane departure warning	√	√	√			
		Air conditioning	√	√	√	√	√	1.Configuration
		Electropump assembly	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Multifunction screen	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Not Fastened warning light(TNB)	√					
		Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		CD player	√	√	√		√	
		Audio amplifier	√	√	√			
		Services Module	√	√	√			
		Rain sensor	√	√	√			

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting/Signalling	Discharge bulb with directional dipped headlamp	√	√	√			
		Driving school module	√	√			√	
405	Petrol engine	N6A ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		N6B ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		NFU ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		L6A SAGEM SL96	√	√	√	√		
		1600RD SL96	√	√	√	√		
		LFZ SAGEM S2000	√	√	√	√	√	1.Initialization Adapatation
		NFU J35	√	√	√	√	√	1.Configuration
406	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapatation
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Left Air bag	Left side airbag	√	√	√			1.Marching
	Right Air bag	Right side airbag	√	√	√			1.Marching
406R	Petrol engine	XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		R6F MM48P	√	√	√	√	√	1.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adaption	
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
4008		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
Left Air bag	Left side airbag	√	√	√			1.Marchting	
Right Air bag	Right side airbag	√	√	√			1.Marchting	
		XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R COUPE	Petrol engine	LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		R6F MM48P	√	√	√	√	√	1.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adaption	
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
	BSI	√	√	√	√		1.key program	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		RHR SIEMENS SID803	√	√	√	√	√	1.Configuration
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
407		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP8.1	√	√	√	√		
		ESP EBC 440(KWP)	√	√	√	√		
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marching 2.Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AM6 Euro5 automatic gearbox	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		
	Inform the driver Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	
		Telematics	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
	Vehicle protection Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
Passenger door module		√	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√		
		Rain/Brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√	√	
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Additional heating	√	√	√	√	√	
		Power steering	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√	√	
RFN MM48P(Mechanical throttle housing)		√	√	√	√	√	1.Initialization Adapation	
RFN MM4MP2(Motorised butterfly)		√	√	√	√	√		
R6F MM4.8P		√	√	√	√	√	1.Initialization Adapation	
XFX BOSCH ME7.4.6		√	√	√	√	√	1.Configuration 2.Initialization Adapation	
Diesel engine		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		4HX BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
ABS		ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 VAN	A/T	BVA ZF	√	√	√	√		
		4HP20 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Air bag	Air bag	√	√	√			
	Driver information	Multi-function display	√	√	√	√	√	
		Parking assistance	√	√	√	√	√	
		Instrument panel	√	√	√		√	1.Configuration
		CD player	√	√	√	√	√	
	switch control	Radio	√	√	√	√	√	1.Configuration
		Driver's door control panel	√	√	√	√		
	Visibility/Lighting	Passenger's door control panel	√	√	√	√		
		Headlamp height corrector	√	√	√	√	√	
		BSI	√	√	√	√	√	1.Initialization Adaption
		storing of the driving position	√	√	√	√		
	Diesel fuel additive control unit	√	√	√	√	√	1.Marching	
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Petrol engine	3FZ MM6LP	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		3FY MM6LPB	√	√	√	√	√	
		XFV ME747	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		4HP BOSCH EDC16CP39	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 CAN	Diesel engine	4HR BOSCH EDC16CP39	√	√	√	√		
		4HS BOSCH EDC16CP39	√	√	√	√		
		4HT BOSCH EDC16CP39	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	AT ECU	AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH8	√	√	√	√		
	Air bag	Airbag ECU	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Drivers seat memory unit	√	√	√			
		Air conditioning	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√	√	
	Inform the	Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Steering wheel switching module	√	√	√	√	√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Telamatics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
806	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	ABS	BOSCH ABS5.3	√	√	√	√		
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marching
	Additional heating		√	√	√	√	√	
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
RHM BOSCH EDC15C2		√	√	√	√			
RHT BOSCH EDC15C2		√	√	√	√			

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 VAN		4HW BOSCH EDC15C2	√	√	√	√		
	ABS	ABR BOSCH 5.7	√	√	√	√		
		ESP BOSCH 5.7	√	√	√	√	√	
	Driver information	Display/Telematics	√	√	√	√	√	
		Warning light and odometer ECU	√	√	√	√		
		Parking assistance	√	√	√	√		
		CD player	√	√	√	√		
		Instrument panel	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		radio/telematic receive control	√	√	√	√	√	
		Visibility/Lighting	Switch unit under steering wheel(COM 2000)	√	√	√	√	
	Right headlamp beam corrector		√	√	√	√		
	Left headlamp beam level corrector		√	√	√	√		
	switch control	Driver's door module	√	√	√	√		
		Sliding side door	√	√	√	√		
		Passenger's door module	√	√	√	√		
	A/C	WEBASTO additional heating	√	√	√	√		
		Climate control	√	√	√	√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Air bag	Air bag	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√		
		Alarm	√	√	√	√	√	
		Storing of the driving position	√	√	√	√		
		BSI	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√		
		3FZ MM6LP	√	√	√	√		
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adapation
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√		
		RFN MM6LP	√	√	√	√		1.Initialization Adapation
		XFW BOSCH ME746	√	√	√	√		
			BSI	√	√	√	√	
Petrol engine		RFJ MM6LPB	√	√	√			
		4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of part mileage
		4HP EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HR EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 CAN	Diesel engine	4HS EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HT EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		RHK SIEMENS SID 803	√	√	√			
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP ESP 8.1	√	√	√	√		
		ESP ESP_BOSCH8	√	√	√	√		
	Air bag	ESP Airbag ECU	√	√	√	√		
	A/T	BVA AL4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		BVA_AM6C	√	√	√	√	√	1.Configuration 2.Oil wear counter
		Additional heating	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	
		Driver's door module	√	√	√	√	√	

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Power steering GEP	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	
		Multi-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Telematic receiver control	√					
		Telematics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Warning lights/odometer unit	√	√	√			
		Alarm	√	√	√			
		Front sunroof	√	√	√			
		Middle sunroof	√	√	√			
		Rear sunroof	√	√	√			
		Passenger door module	√	√	√	√	√	
	Visibility/Lighting/Signalling	Sliding side doors module	√	√	√			
		Left headlamp beam level corrector	√	√	√			
		Rain/brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√			

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Steering wheel switching module	√	√	√			
Petrol engine		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		KFX MM1AP	√	√	√	√		
		KFX SGEAM SL96	√	√	√	√	√	1.Initialization Adapation
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFN MM6LP	√	√	√	√		1.Initialization Adapation
		KFW SAGEM S2000PM1	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adapation

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
PARTNER		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW SAGEM S2000PM2	√	√	√	√		
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW J34P	√	√	√	√	√	1.Configuration
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HW BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
	Inform the driver/Audio/Communication	Telematics	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Radio PHILIPS	√	√	√	√	√	1.Configuration
		Radio CLARION	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
A/C	WEBASTO additional heating	√	√	√	√			
Air bag	Air bag and seat belt	√	√	√			1.Marching	
	SAC CENT AUTOLIV	√	√	√				

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Additional heating		√	√	√	√	√	
PARTNER B9	Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	9HV EDC16C3	√	√	√	√	√	1.Configuration
		9HW EDC16C3	√	√	√	√	√	1.Configuration
		9HT EDC16C3	√	√	√	√	√	1.Configuration
		9HX EDC16C3	√	√	√	√	√	1.Configuration
		9HZ EDC16C3	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS 8.1	√	√	√	√		
		ESP 8.1	√	√	√	√		
		Air bags	√	√	√	√		
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
Instrument panel		√	√	√	√	√	1.Configuration	
	CD player	√	√	√		√		

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Telematics	√	√	√	√	√	1.Configuration
	Driving assistance/Comfort	Parking assistance	√	√	√	√		1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
EXPERT	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	ABS	BOSCH ABS5.3	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Additional heating		√	√	√	√	√	
	Petrol engine	RFH MM6KP(EW10A)	√	√	√	√	√	1.Configuration
	Diesel engine	9HT BOSCH EDC16C3	√	√	√	√		
		9HU BOSCH EDC16C3-EDC16C34	√	√	√	√	√	1.Configuration

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
EXPERT 2	Diesel engine	RHG SIEMENS SID 803	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS8_BOSCH	√	√	√	√	√	1.Configuration 2. Bleeding 3.Calibration of the steering wheel angle sensor
		ESP_BOSCH8	√	√	√	√		
		ABS8.1	√	√	√	√		
		ESP8.1	√	√	√	√		
		Airbag ECU	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Additional heating	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multi-function display	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Telematics	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			

PEUGEOT V42.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
BOXER	Petrol engine	MM48p 2L essence plombee	√	√	√	√		
		MM48p 2L dual fuel(LPG)	√	√	√	√		
		MM48p 2L Omegadeu petrol	√	√	√	√		
	Diesel engine	2.0L HDI BOSCH EDC15C7		√	√	√		
BOXER 3	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		
BOXER 3 minibus	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		

(*):Tested;

(?):Manual on website(www.x431.com)

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.	N/A
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.	N/A
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.	N/A
diagun connector	N/A	For all the cars.
SUPER 16	For all the cars.	N/A