

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1996	1996	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓	✓	✓	✓	✓		
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
1997	1997	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓	✓	✓	✓	✓		
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1998	1998	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓	✓	✓	✓	✓		
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
1999	1999	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	✓	✓	✓	✓	✓		
			B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5244S	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
2000	2000	Immobilizer		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
	2001	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	✓	✓	✓	✓	✓		
			B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5244S	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
S40(-04)	2001	CPM		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	√	√	√	√	√		
			B4164S2	√	√	√	√	√		
			B4184SJ	√	√	√	√	√		
			B4204T	√	√	√	√	√		
			B4204T3	√	√	√	√	√		
			B4204T4	√	√	√	√	√		
			B5254S	√	√	√	√	√		
			B5244S	√	√	√	√	√		
			TCM AW55-50SN	√	√	√	√	√		
			ABS		√	√	√	√		
			SRS		√	√	√	√		
			Immobilizer		√	√	√	√		
			CEM		√	√	√	√		
			DIM		√	√	√	√		
			CCM		√	√	√	√		
			VGLA		√	√	√	√		
			DSA		√	√	√	√		
			CPM		√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B4204S2	√	√	√	√	√		
			B4164S2	√	√	√	√	√		
			B4184SJ	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others	
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2002	2002	ECM	B4204T	✓	✓	✓	✓	✓			
			B4204T3	✓	✓	✓	✓	✓			
			B4204T4	✓	✓	✓	✓	✓			
			B5254S	✓	✓	✓	✓	✓			
			B5244S	✓	✓	✓	✓	✓			
		TCM	AW55-50SN	✓	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓			
		SRS		✓	✓	✓	✓				
		Immobilizer		✓	✓	✓	✓	✓			
		CEM		✓	✓	✓	✓	✓			
	2003	DIM		✓	✓	✓	✓	✓			
		CCM		✓	✓	✓	✓	✓			
		VGLA		✓	✓	✓	✓	✓			
		DSA		✓	✓	✓	✓	✓			
		CPM		✓	✓	✓	✓	✓			
2003	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)		
		ECM	B4204S2	✓	✓	✓	✓	✓			
	2003		B4164S2	✓	✓	✓	✓	✓			
			B4184SJ	✓	✓	✓	✓	✓			
			B4204T	✓	✓	✓	✓	✓			
			B4204T3	✓	✓	✓	✓	✓			
			B4204T4	✓	✓	✓	✓	✓			
			B5254S	✓	✓	✓	✓	✓			
			B5244S	✓	✓	✓	✓	✓			
	TCM	AW55-50SN		✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
2004		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B4204S2		✓	✓	✓	✓	✓		
		B4164S2		✓	✓	✓	✓	✓		
		B4184SJ		✓	✓	✓	✓	✓		
		B4204T		✓	✓	✓	✓	✓		
		B4204T3		✓	✓	✓	✓	✓		
		B4204T4		✓	✓	✓	✓	✓		
		B5254S		✓	✓	✓	✓	✓		
		B5244S		✓	✓	✓	✓	✓		
	TCM	AW55-50SN		✓	✓	✓	✓	✓		
	ABS			✓	✓	✓	✓	✓		
	SRS			✓	✓	✓	✓			
	Immobilizer			✓	✓	✓	✓	✓		
	CEM			✓	✓	✓	✓	✓		
	DIM			✓	✓	✓	✓	✓		
	CCM			✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		VGLA		√	√	√	√	√		
		DSA		√	√	√	√	√		
		CPM		√	√	√	√	√		
		ShortTest							search all system and DTC(s) of vehicle	
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
	Diesel Eng	B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	
		D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)	
		D5252T		√	√	√	√	√	1.Programming the idle speed	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM	AW55-50SN	TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
	4T65AWD	ABS	4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
	SRS	SRS		✓	✓	✓	✓			Read Extend DTC
				✓	✓	✓	✓			Read Extend DTC
	CEM			✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2001		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2001	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM	B5244S							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
Diesel Eng	D5244T	D5244T							1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2002	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others	
General Service	ECM	ECM							1.Resetting the SRL(Service Reminder Lamp)to zero(*)		
			B5244S	✓	✓	✓	✓	✓			
			B6304S3	✓	✓	✓	✓	✓			
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B6284T	✓	✓	✓	✓	✓			
			B5204T4	✓	✓	✓	✓	✓			
			B5204T3	✓	✓	✓	✓	✓			
			B5244SG	✓	✓	✓	✓	✓			
			B6294S2	✓	✓	✓	✓	✓			
			B5244S2	✓	✓	✓	✓	✓			
			B5244S6	✓	✓	✓	✓	✓			
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B5234T3	✓	✓	✓	✓	✓			
			B5204T5	✓	✓	✓	✓	✓			
			B5254T4	✓	✓	✓	✓	✓			
			B6294S	✓	✓	✓	✓	✓			
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
	Diesel Eng		D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)		
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed		
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2003	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List (Note:For reference only)										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	
		DEM		√	√	√	√			
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ETM		√			√			
ECM		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
Diesel Eng		B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	
		D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)	
		D5252T		√	√	√	√	√	1.Programming the idle speed	
		AW55-50SN		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2004	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		DEM		√	√	√	√			
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ETM		√			√			
ECM	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7	✓	✓	✓	✓	✓			
		B4204S3	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T	✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2006	2006	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
S60		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T4		✓	✓	✓	✓	✓		
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2007		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2008	TCM	AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
ECM	General Service	HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2009	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√	√	√	Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		SUM		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		UEM		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2010	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
	1997	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM		√	√	√	√			
		TCM		√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√	√			
		IC		√					1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		VGLA		√	√	√				
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM		√	√	√	√			
		TCM		√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1998	IC	IC		√					1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		VGLA		√	√	√				
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
		B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
S70	1999	Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5252T	√	√	√	√	√	1.Programming the idle speed	
		TCM	AW55-50SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	✓	✓	✓	✓	✓		
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000		Diesel Eng	B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		SRS		√	√	√	√			
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)	
		PSL		√	√	√	√	√		
		PSR		√	√	√	√	√		
		CPM		√	√	√	√	√		
		CCM		√	√	√	√	√		
		RTI		√	√	√	√	√		
		ShortTest							search all system and DTC(s) of vehicle	
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	√	√	√	√	√		
			B6304S3	√	√	√	√	√		
			B6294T	√	√	√	√	√	1.Resetting the adaptation values	
			B6284T	√	√	√	√	√		
			B5204T4	√	√	√	√	√		
			B5204T3	√	√	√	√	√		
			B5244SG	√	√	√	√	√		
			B6294S2	√	√	√	√	√		
			B5244S2	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Resetting the adaptation values	
			B5234T3	√	√	√	√	√		
			B5204T5	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM	2000-2008	Diesel Eng	B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		Diesel Eng	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TCM	TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
		TCM	4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1999		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of damper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions					
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions
ECM	ECM	B5244S	✓	✓	✓	✓	✓		
		B6304S3	✓	✓	✓	✓	✓		
		B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B6284T	✓	✓	✓	✓	✓		
		B5204T4	✓	✓	✓	✓	✓		
		B5204T3	✓	✓	✓	✓	✓		
		B5244SG	✓	✓	✓	✓	✓		
		B6294S2	✓	✓	✓	✓	✓		
		B5244S2	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T3	✓	✓	✓	✓	✓		
		B5204T5	✓	✓	✓	✓	✓		
		B5254T4	✓	✓	✓	✓	✓		
		B6294S	✓	✓	✓	✓	✓		
Diesel Eng	Diesel Eng	B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
	Gearbox	D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000	2000	TCM	AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2000		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List (Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others		
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions			
ECM	General Service	ECM							1.Resetting the SRL(Service Reminder Lamp)to zero(*)			
				B5244S	✓	✓	✓	✓				
	B6304S3			B6304S3	✓	✓	✓	✓	✓			
				B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B6284T	✓	✓	✓	✓	✓			
				B5204T4	✓	✓	✓	✓	✓			
				B5204T3	✓	✓	✓	✓	✓			
				B5244SG	✓	✓	✓	✓	✓			
				B6294S2	✓	✓	✓	✓	✓			
				B5244S2	✓	✓	✓	✓	✓			
				B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B5234T3	✓	✓	✓	✓	✓			
				B5204T5	✓	✓	✓	✓	✓			
				B5254T4	✓	✓	✓	✓	✓			
				B6294S	✓	✓	✓	✓	✓			
Diesel Eng	B5244T7			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
	D5244T			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)		
	D5252T			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed		
		AW55-50SN		AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
TCM	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
		4T65EV	✓	✓	✓	✓	✓	✓		Read Extend DTC
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		✓	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
	SRS		✓	✓	✓	✓				Read Extend DTC
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
	UEM		✓	✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2001	REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2001		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others	
General Service	ECM	ECM							1.Resetting the SRL(Service Reminder Lamp)to zero(*)		
			B5244S	✓	✓	✓	✓	✓			
			B6304S3	✓	✓	✓	✓	✓			
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B6284T	✓	✓	✓	✓	✓			
			B5204T4	✓	✓	✓	✓	✓			
			B5204T3	✓	✓	✓	✓	✓			
			B5244SG	✓	✓	✓	✓	✓			
			B6294S2	✓	✓	✓	✓	✓			
			B5244S2	✓	✓	✓	✓	✓			
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B5234T3	✓	✓	✓	✓	✓			
			B5204T5	✓	✓	✓	✓	✓			
			B5254T4	✓	✓	✓	✓	✓			
Diesel Eng			B6294S	✓	✓	✓	✓	✓			
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
	Diesel Eng	Diesel Eng	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)		
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed		
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
TCM	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
		4T65EV	✓	✓	✓	✓	✓	✓		Read Extend DTC
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		✓	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
	SRS		✓	✓	✓	✓	✓			Read Extend DTC
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
	UEM		✓	✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
	2002	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM	ECM							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B5244S	✓	✓	✓	✓	✓		
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
Diesel Eng	Diesel Eng	Diesel Eng	B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
			AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
TCM	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
		4T65EV	✓	✓	✓	✓	✓	✓		Read Extend DTC
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		✓	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
	SRS		✓	✓	✓	✓	✓			Read Extend DTC
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
	UEM		✓	✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
S80(-06)	2003	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List (Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others		
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions			
ECM	General Service	ECM							1.Resetting the SRL(Service Reminder Lamp)to zero(*)			
				B5244S	✓	✓	✓	✓				
	B6304S3			B6304S3	✓	✓	✓	✓	✓			
				B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B6284T	✓	✓	✓	✓	✓			
				B5204T4	✓	✓	✓	✓	✓			
				B5204T3	✓	✓	✓	✓	✓			
				B5244SG	✓	✓	✓	✓	✓			
				B6294S2	✓	✓	✓	✓	✓			
				B5244S2	✓	✓	✓	✓	✓			
				B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B5234T3	✓	✓	✓	✓	✓			
				B5204T5	✓	✓	✓	✓	✓			
				B5254T4	✓	✓	✓	✓	✓			
				B6294S	✓	✓	✓	✓	✓			
Diesel Eng	B5244T7			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
				B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values		
	D5244T			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)		
	D5252T			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed		
		AW55-50SN		AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
TCM	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
		4T65EV	✓	✓	✓	✓	✓	✓		Read Extend DTC
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		✓	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
	SRS		✓	✓	✓	✓	✓			Read Extend DTC
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
	UEM		✓	✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
2004		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
2005	TCM	AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		4T65EV	4T65EV	√	√	√	√	√	1.Reset adaptation to zero; 2.Resetting the counter for - gearbox oil change; 3.Activating gear indication	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
2004-2008 S40/V40	2004-2005	PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	Read Extend DTC
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		DDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	Read Extend DTC
	2005-2008	CCM		✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		✓	✓	✓	✓		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		✓	✓	✓	✓			Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		RTI		✓	✓	✓				Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓			✓		1.Programming the additional and parking heater	
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
ECM	General Service	RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
	ECM	B5244S4		✓	✓	✓	✓	✓	1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
2006	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		√	√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS		√	√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
				√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
				√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
				√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
VOLVO S60 2000-2007	V41.60	PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		ShortTest							search all system and DTC(s) of vehicle	
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit	
			B5254T10	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit	
			B8444S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6304T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6324S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6324S2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng	D5244T5	Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
				√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TCM	TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2007	2007	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
		CEM		√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
		PDM		√	√	√	√	√		
		PSM		√	√	√	√	√		
		DDM		√	√	√	√			
		PCM		√	√	√	√			
		TCM		√	√	√	√			
		ECM		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
				√	√	√	√	√	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment	
				√	√	√				
				√	√	√	√	√		
				√	√	√	√	√		
				√	√	√	√			
				√	√	√				
				√	√	√				
				√	√	√	√			
				√	√	√				
				√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng	D5244T5	Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
				√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TCM	TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2008	2008	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
		CEM		√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
		PDM		√	√	√	√	√		
		PSM		√	√	√	√	√		
		DDM		√	√	√	√			
		PCM		√	√	√	√			
		TCU		√	√	√	√			
		ECU		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
			CCM	√	√	√	√	√	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment	
			AUD	√	√	√				
			DEM	√	√	√	√	√		
			ICM	√	√	√	√	√		
			SAS	√	√	√	√			
			MMM	√	√	√				
			PAM	√	√	√	√			
			IAM	√	√	√				
			BPM	√	√	√	√			
			SUM	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
S80(07-)		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng	D5244T5	Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
				√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TCM	TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2009	2009	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
		CEM		√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
		PDM		√	√	√	√	√		
		PSM		√	√	√	√	√		
		DDM		√	√	√	√			
		PCM		√	√	√	√	√		
		TCM		√	√	√	√	√		
		ECM		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
				√	√	√	√	√	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment	
				√	√	√				
				√	√	√	√	√		
				√	√	√	√	√		
				√	√	√	√			
				√	√	√				
				√	√	√				
				√	√	√	√			
				√	√	√				
				√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Diesel Eng	D5244T5	Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
				√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TCM	TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List(Note:For reference only)

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2010	2010	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
		CEM		√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
		PDM		√	√	√	√	√		
		PSM		√	√	√	√	√		
		DDM		√	√	√	√			
		PCM		√	√	√	√			
		TCU		√	√	√	√			
		ECU		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
			CCM	√	√	√	√	√	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment	
			AUD	√	√	√				
			DEM	√	√	√	√	√		
			ICM	√	√	√	√	√		
			SAS	√	√	√	√			
			MMM	√	√	√				
			PAM	√	√	√	√			
			IAM	√	√	√				
			BPM	√	√	√	√			
			SUM	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
S90	1997	PBM		✓	✓	✓	✓		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓	✓			
		KVM		✓	✓	✓	✓			
		HLDF		✓	✓	✓	✓			
		POT		✓	✓	✓	✓			
		AUU		✓	✓	✓	✓			
		FSM		✓	✓	✓	✓			
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		ECM		✓	✓	✓	✓			
		TCM		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		IC		✓					1.Oil lamp reset(*)	
		ABS		✓	✓	✓	✓	✓		
		Immobilizer		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		RTI		✓	✓	✓	✓	✓		
		ECM		✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
1998	1998	TCM		√	√	√	√			
		SRS		√	√	√	√			
		IC		√					1.Oil lamp reset(*)	
		ABS		√	√	√	√	√		
		Immobilizer		√	√	√	√			
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		RTI		√	√	√	√	√		
1997	1997	ShortTest							search all system and DTC(s) of vehicle	
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	D5252T MSA 15.7	√	√	√	√			
		TCM	AW50-42	√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√	√			
		Combi		√	√	√	√		1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		VGLA		√	√	√				
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
1998		ECM	D5252T MSA 15.7	✓	✓	✓	✓			
		TCM	AW50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓		1.Oil lamp reset(*)	
		Immobilizer		✓	✓	✓	✓			
		VGLA		✓	✓	✓				
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		CPM		✓	✓	✓	✓	✓		
2000		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	✓	✓	✓	✓	✓		
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1999	TCM	Diesel Eng	B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
		AW	D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
			AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
V70(-00)		4T65AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS	√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS	√	√	√	√	√		Read Extend DTC
			Immobilizer	√	√	√	√	√		
			VGLA	√	√	√	√	√		
			CI	√	√	√	√	√	1. Reseting the service reminder indicator(SRI)	
			PSL	√	√	√	√	√		
			PSR	√	√	√	√	√		
			CPM	√	√	√	√	√		
			CCM	√	√	√	√	√		
			RTI	√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S	√	√	√	√	√			
		B6304S3	√	√	√	√	√			
		B6294T	√	√	√	√	√		1.Resetting the adaptation values	
		B6284T	√	√	√	√	√			
		B5204T4	√	√	√	√	√			
		B5204T3	√	√	√	√	√			
		B5244SG	√	√	√	√	√			
		B6294S2	√	√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000	2000	ECM	B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		Diesel Eng	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others	
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC	
			4T65EV	√	√	√	√	√		Read Extend DTC	
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC	
		SRS		√	√	√	√	√		Read Extend DTC	
		Immobilizer		√	√	√	√	√			
		VGLA		√	√	√	√	√			
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)		
		PSL		√	√	√	√	√			
		PSR		√	√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)		
			B5244S	√	√	√	√	√			
			B6304S3	√	√	√	√	√			
		B6294T		√	√	√	√	√	1.Resetting the adaptation values		
		B6284T		√	√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		ECM	B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		Diesel Eng	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
			AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000	2000	TCM	AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		✓	✓	✓	✓	✓	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2000	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		RTI		√	√	√				Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		B5244S		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
	Diesel Eng	D5244T	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2001	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM	B5244S							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
Diesel Eng	D5244T	D5244T							1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS		√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS		√	√	√	√		Read Extend DTC
			CEM		√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
			UEM		√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2002	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM	B5244S							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
Diesel Eng	D5244T	D5244T							1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2003	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
CPM				√				√	1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ETM		√			√			
ECM		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
Diesel Eng		B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	
		D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)	
		D5252T		√	√	√	√	√	1.Programming the idle speed	
		AW55-50SN		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2004	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM		CPM		√			√		1.Programming the additional and parking heater	
			ETM	√			√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B5244S4	√	√	√	√	√	1.Resetting the adaptation values	
		ECM	B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
V70(00-)			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS			√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

 
VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2006	2006	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2007		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√		Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
ECM	General Service	KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
	ECM	B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2008	2008	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		ShortTest							search all system and DTC(s) of vehicle	
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List(Note:For reference only)

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2008		SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
		CEM		√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
	PDM			√	√	√	√	√		
	PSM			√	√	√	√	√		
	DDM			√	√	√	√			
	PCM			√	√	√	√	√		
	TCU			√	√	√	√	√		
	ECU			√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment		
			AUD	✓	✓	✓					
			DEM	✓	✓	✓	✓	✓			
			ICM	✓	✓	✓	✓	✓			
			SAS	✓	✓	✓	✓				
			MMM	✓	✓	✓					
			PAM	✓	✓	✓	✓				
			IAM	✓	✓	✓					
			BPM	✓	✓	✓	✓				
			SUM	✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>									
Vehicle Model	Year	System	Type	Functions					Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	
V70(08-)	2009	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light
				√	√	√	√	√	
		DIM							1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder
				√	√	√	√		
		PDM		√	√	√	√	√	
		PSM		√	√	√	√	√	
		DDM		√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment		
			AUD	✓	✓	✓					
			DEM	✓	✓	✓	✓	✓			
			ICM	✓	✓	✓	✓	✓			
			SAS	✓	✓	✓	✓				
			MMM	✓	✓	✓					
			PAM	✓	✓	✓	✓				
			IAM	✓	✓	✓					
			BPM	✓	✓	✓	✓				
			SUM	✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2010	SRS	CEM	DIM	√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
				√	√	√	√	√		
				√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
	PDM			√	√	√	√	√		
	PSM			√	√	√	√	√		
	DDM			√	√	√	√			
	ECM			√	√	√	√			
	PCM			√	√	√	√			
	TCU			√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment		
			AUD	✓	✓	✓					
			DEM	✓	✓	✓	✓	✓			
			ICM	✓	✓	✓	✓	✓			
			SAS	✓	✓	✓	✓				
			MMM	✓	✓	✓					
			PAM	✓	✓	✓	✓				
			IAM	✓	✓	✓					
			BPM	✓	✓	✓	✓				
			SUM	✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
	1996	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	√	√	√	√	√		
		TCM	AW50-42	√	√	√	√			
		ABS		√	√	√	√	√		
		SRS		√	√	√	√			
		IC		√	√	√	√	√		
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CPM		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
1997		DSA		√	√	√	√	√		
		CCM		√	√	√	√	√		
		RTI		√	√	√	√	√		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	√	√	√	√	√		
		TCM	AW50-42	√	√	√	√			
		ABS		√	√	√	√	√		
		SRS		√	√	√	√			
		IC		√	√	√	√	√		
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CPM		√	√	√	√	√		
		DSA		√	√	√	√	√		
		CCM		√	√	√	√	√		
		RTI		√	√	√	√	√		
1998	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Fenix5.1	√	√	√	√	√		
		TCM	AW50-42	√	√	√	√			
		ABS		√	√	√	√	√		
		SRS		√	√	√	√			
		IC		√	√	√	√	√		
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CPM		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
1999		DSA		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B4204S2		✓	✓	✓	✓	✓		
		B4164S2		✓	✓	✓	✓	✓		
		B4184SJ		✓	✓	✓	✓	✓		
		B4204T		✓	✓	✓	✓	✓		
		B4204T3		✓	✓	✓	✓	✓		
		B4204T4		✓	✓	✓	✓	✓		
		B5254S		✓	✓	✓	✓	✓		
		B5244S		✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B4204S2		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
2000	V40	ECM	B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5244S	✓	✓	✓	✓	✓		
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	✓	✓	✓	✓	✓		
			B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
2001			B5244S	✓	✓	✓	✓	✓		
		TCM	AW55-50/51SN	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
2002		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	✓	✓	✓	✓	✓		
			B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5244S	✓	✓	✓	✓	✓		
		TCM	AW55-50/51SN	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
2003		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B4204S2		✓	✓	✓	✓	✓		
		B4164S2		✓	✓	✓	✓	✓		
		B4184SJ		✓	✓	✓	✓	✓		
		B4204T		✓	✓	✓	✓	✓		
		B4204T3		✓	✓	✓	✓	✓		
		B4204T4		✓	✓	✓	✓	✓		
		B5254S		✓	✓	✓	✓	✓		
		B5244S		✓	✓	✓	✓	✓		
		TCM	AW55-50/51SN	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2004		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B4204S2	✓	✓	✓	✓	✓		
			B4164S2	✓	✓	✓	✓	✓		
			B4184SJ	✓	✓	✓	✓	✓		
			B4204T	✓	✓	✓	✓	✓		
			B4204T3	✓	✓	✓	✓	✓		
			B4204T4	✓	✓	✓	✓	✓		
			B5254S	✓	✓	✓	✓	✓		
			B5244S	✓	✓	✓	✓	✓		
		TCM	AW55-50/51SN	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓			
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CEM		✓	✓	✓	✓	✓		
		DIM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		DSA		✓	✓	✓	✓	✓		
1997		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Motronic 4.3	✓	✓	✓	✓	✓	Reset Adaption	
			Fenix 5.2	✓	✓	✓	✓	✓		
			Motronic 4.4	✓	✓	✓	✓	✓	Reset Adaption	
		TCM	AW50-42	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
1992		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		Immobilizer		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1993	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Motronic 4.3	✓	✓	✓	✓	✓	Reset Adaption	
			Fenix 5.2	✓	✓	✓	✓	✓		
			Motronic 4.4	✓	✓	✓	✓	✓	Reset Adaption	
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓	✓		
1994	1993	SRS		✓	✓	✓	✓			
		IC		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		Immobilizer		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1994	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Motronic 4.3	✓	✓	✓	✓	✓	Reset Adaption	
			Fenix 5.2	✓	✓	✓	✓	✓		
			Motronic 4.4	✓	✓	✓	✓	✓	Reset Adaption	
		TCM	AW50-42	✓	✓	✓	✓	✓		
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
850		IC		√	√	√	√	√	1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		PSL		√	√	√	√			
		PSR		√	√	√	√			
	1995	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	Motronic 4.3	√	√	√	√	√	Reset Adaption	
			Fenix 5.2	√	√	√	√	√		
			Motronic 4.4	√	√	√	√	√	Reset Adaption	
		TCM	AW50-42	√	√	√	√	√		
		ABS		√	√	√	√	√		
1996	1995	SRS		√	√	√	√			
		IC		√	√	√	√	√	1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
	ECM	Motronic 4.3		√	√	√	√	√	Reset Adaption	
		Fenix 5.2		√	√	√	√	√		
		Motronic 4.4		√	√	√	√	√	Reset Adaption	
	TCM	AW50-42		√	√	√	√	√		
	ABS			√	√	√	√	√		
	SRS			√	√	√	√			
	IC			√	√	√	√	√	1.Oil lamp reset(*)	
	Immobilizer			√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1997		PSL		√	√	√	√			
		PSR		√	√	√	√			
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		Motronic 4.3		√	√	√	√	√	Reset Adaption	
		Fenix 5.2		√	√	√	√	√		
	TCM	Motronic 4.4		√	√	√	√	√	Reset Adaption	
		AW50-42		√	√	√	√	√		
	ABS			√	√	√	√	√		
	SRS			√	√	√	√			
	IC			√	√	√	√	√	1.Oil lamp reset(*)	
	Immobilizer			√	√	√	√			
FPCM	PSL			√	√	√	√			
	PSR			√	√	√	√			
	ShortTest								search all system and DTC(s) of vehicle	
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		

VOLVO V41.60 Diagnostics List (Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2000-2005	ECM	B5244S2	B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
	Diesel Eng	D5244T	D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
		D5252T	D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
	TCM	AW55-50SN	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		AW50-42	AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		AW50/51AWD	AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			4T65EV	√	√	√	√	√		
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			
		CEM		√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2003	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		MMM		√	√	√	√				Read Extend DTC
		AEM		√	√	√	√	√			Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater		
		ETM		√			√				
		MP1		√	√	√	√	√			
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)		
		B5244S		√	√	√	√	√			
		B6304S3		√	√	√	√	√			
		B6294T		√	√	√	√	√	1.Resetting the adaptation values		
		B6284T		√	√	√	√	√			
		B5204T4		√	√	√	√	√			
		B5204T3		√	√	√	√	√			
		B5244SG		√	√	√	√	√			
		B6294S2		√	√	√	√	√			
		B5244S2		√	√	√	√	√			
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values		
		B5234T3		√	√	√	√	√			
		B5204T5		√	√	√	√	√			
		B5254T4		√	√	√	√	√			
		B6294S		√	√	√	√	√			
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values		
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values		
	Diesel Eng	D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM		TCM	D5252T	√	√	√	√	√	1.Programming the idle speed	
			AW55-50SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS		√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS		√	√	√			Read Extend DTC
			CEM		√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2004	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			
		MP1		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S7		√	√	√	√	√		
		B4204S3		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5254T7		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5204T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		√	√	√	√	√	1.Resetting the adaptation values	
		B5244T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B4184S11		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
		D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005	2005	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		MP2		√	√	√	√	√		Read Extend DTC
		ATM		√	√	√	√			
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		SAS		√	√	√	√			
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		CPM		✓			✓		1.Programming the additional and parking heater	
		MP1		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2006		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		MP2		√	√	√	√	√		Read Extend DTC
		ATM		√	√	√	√			
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		SAS		√	√	√	√			
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
XC90			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2007	2007	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		MP2		√	√	√	√	√		Read Extend DTC
		ATM		√	√	√	√			
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		SAS		√	√	√	√			
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2008		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2009	TCM	AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		MP2		√	√	√	√	√		Read Extend DTC
		ATM		√	√	√	√			
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		SAS		√	√	√	√			
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2010	2010	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		MP2		√	√	√	√	√		Read Extend DTC
		ATM		√	√	√	√			
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		SAS		√	√	√	√			
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
		TCM	TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
		SRS		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CEM		√	√	√	√	√	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence		
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values		
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2005	DIM			√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		SUB		√	√	√				
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
	TCM	TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
	ABS			√	√	√	√	√	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
	SRS			√	√	√	√			
	CEM			√	√	√	√	√	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2006	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000-2005 S40/V40	2000-2005	SUB		✓	✓	✓				
		CPM		✓			✓		1.Programming the additional and parking heater	
		MP1		✓	✓	✓	✓	✓		
	2001-2005	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6324S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		TCM	TF-80SC AWD	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
	2001-2005	ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
		SRS		✓	✓	✓	✓			
	2001-2005	CEM		✓	✓	✓	✓	✓	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2007	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
XC90 V8		SUB		√	√	√				
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
		TCM	TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
		SRS		√	√	√	√			
		CEM		√	√	√	√	√	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2008		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000-2005 S40/V40	2000-2005	SUB		✓	✓	✓				
		CPM		✓			✓		1.Programming the additional and parking heater	
		MP1		✓	✓	✓	✓	✓		
	2001-2005	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6324S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		TCM	TF-80SC AWD	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
	2001-2005	ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
		SRS		✓	✓	✓	✓			
	2001-2005	CEM		✓	✓	✓	✓	✓	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2009	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000-2005 S40/V40	2000-2005	SUB		✓	✓	✓				
		CPM		✓			✓		1.Programming the additional and parking heater	
		MP1		✓	✓	✓	✓	✓		
	2001-2005	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B8444S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6324S	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		TCM	TF-80SC AWD	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter 3.Calibration of position sensor 4.Activating gear indication 5.Activation of adaption	
	2001-2005	ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment 2.Calibration(only vehicles with DSTC)	
		SRS		✓	✓	✓	✓			
	2001-2005	CEM		✓	✓	✓	✓	✓	1.Programming control module 2.Resetting the factory settings 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of short flash sequence	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2010	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		PSM		√	√	√	√	√		
		DDM		√	√	√	√	√	1.Initialize the window(*)	
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	
		PHM		√	√	√	√		1.Reinstalling the reserve battery	
		AUD		√	√	√				
		MP2		√	√	√	√	√		
		DEM		√	√	√	√			
		ICM		√	√	√	√	√		
		SAS		√	√	√	√			
		MMM		√	√	√	√			
		AEM		√	√	√	√	√		
		GPS		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		SUB		√	√	√				
		CPM		√			√		1.Programming the additional and parking heater	
		MP1		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S4	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S5	√	√	√	√	√	1.Resetting the adaptation values	
			B5244S7	√	√	√	√	√		
			B4204S3	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2004	TCM	AW55-50/51SN	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	√	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
	ABS		√	√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
	SRS		√	√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S5		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S7		√	√	√	√	√		
		B4204S3		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5254T2	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5254T7	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B5204T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2005	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2006	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List (Note:For reference only)										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
S40(04-)	2007	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2008	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		MPS6		√	√	√	√			Read Extend DTC
		AW50/51AWD		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2009	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
			SRS	√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2010	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWW50-40/50- 42	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
960	1991	ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1992	ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWS50-40/50- 42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
	1993	Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWS50-40/50- 42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
	1994	Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
900	1994	Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1995	ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWS50-40/50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1996	ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWS50-40/50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
	1997	ECM	Motronic 4.4	✓	✓	✓	✓			
		TCM	AWS50-40/50-42	✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓			
		Combi		✓	✓	✓	✓	✓	1.Oil lamp reset(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	√	√	√	√	√		
			B6304S3	√	√	√	√	√		
			B6294T	√	√	√	√	√	1.Resetting the adaptation values	
			B6284T	√	√	√	√	√		
			B5204T4	√	√	√	√	√		
			B5204T3	√	√	√	√	√		
			B5244SG	√	√	√	√	√		
			B6294S2	√	√	√	√	√		
			B5244S2	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Resetting the adaptation values	
			B5234T3	√	√	√	√	√		
			B5204T5	√	√	√	√	√		
			B5254T4	√	√	√	√	√		
			B6294S	√	√	√	√	√		
			B5244T7	√	√	√	√	√	1.Resetting the adaptation values	
			B5234T7	√	√	√	√	√	1.Resetting the adaptation values	
			AW55-50SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1999		TCM	AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S	✓	✓	✓	✓	✓			
		B6304S3	✓	✓	✓	✓	✓			
		B6294T	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B6284T	✓	✓	✓	✓	✓			
		B5204T4	✓	✓	✓	✓	✓			
		B5204T3	✓	✓	✓	✓	✓			
		B5244SG	✓	✓	✓	✓	✓			
		B6294S2	✓	✓	✓	✓	✓			
		B5244S2	✓	✓	✓	✓	✓			
		B5254T2	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T3	✓	✓	✓	✓	✓			
		B5204T5	✓	✓	✓	✓	✓			
		B5254T4	✓	✓	✓	✓	✓			
		B6294S	✓	✓	✓	✓	✓			
		B5244T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		AW55-50SN	✓	✓	✓	✓	✓		1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓		1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
C70 Coupe	2000	TCM	AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	
		SRS		√	√	√	√			
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)	
		CCM		√	√	√	√			
		PSL		√	√	√	√	√		
		PSR		√	√	√	√	√		
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
C70 Coupe	2000-2007	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B5244S	✓	✓	✓	✓	✓		
		ECM	B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		Transmission	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2001		TCM	AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S	✓	✓	✓	✓	✓			
		B6304S3	✓	✓	✓	✓	✓			
		B6294T	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B6284T	✓	✓	✓	✓	✓			
		B5204T4	✓	✓	✓	✓	✓			
		B5204T3	✓	✓	✓	✓	✓			
		B5244SG	✓	✓	✓	✓	✓			
		B6294S2	✓	✓	✓	✓	✓			
		B5244S2	✓	✓	✓	✓	✓			
		B5254T2	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T3	✓	✓	✓	✓	✓			
		B5204T5	✓	✓	✓	✓	✓			
		B5254T4	✓	✓	✓	✓	✓			
		B6294S	✓	✓	✓	✓	✓			
		B5244T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2002		TCM	AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S	✓	✓	✓	✓	✓			
		B6304S3	✓	✓	✓	✓	✓			
		B6294T	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B6284T	✓	✓	✓	✓	✓			
		B5204T4	✓	✓	✓	✓	✓			
		B5204T3	✓	✓	✓	✓	✓			
		B5244SG	✓	✓	✓	✓	✓			
		B6294S2	✓	✓	✓	✓	✓			
		B5244S2	✓	✓	✓	✓	✓			
		B5254T2	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T3	✓	✓	✓	✓	✓			
		B5204T5	✓	✓	✓	✓	✓			
		B5254T4	✓	✓	✓	✓	✓			
		B6294S	✓	✓	✓	✓	✓			
		B5244T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
1999		TCM	AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		cab control sys		✓	✓	✓	✓			
		Rollover protection		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		✓	✓	✓	✓	✓		
		B6304S3		✓	✓	✓	✓	✓		
		B6294T		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B6284T		✓	✓	✓	✓	✓		
		B5204T4		✓	✓	✓	✓	✓		
		B5204T3		✓	✓	✓	✓	✓		
		B5244SG		✓	✓	✓	✓	✓		
		B6294S2		✓	✓	✓	✓	✓		
		B5244S2		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T3		✓	✓	✓	✓	✓		
		B5204T5		✓	✓	✓	✓	✓		
		B5254T4		✓	✓	✓	✓	✓		
		B6294S		✓	✓	✓	✓	✓		
		B5244T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000		TCM	4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CI		√	√	√	√	√	1. Resetting the service reminder indicator(SRI)	
		cab control sys		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
ECM	Rollover protection			✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		✓	✓	✓	✓	✓		
		B6304S3		✓	✓	✓	✓	✓		
		B6294T		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B6284T		✓	✓	✓	✓	✓		
		B5204T4		✓	✓	✓	✓	✓		
		B5204T3		✓	✓	✓	✓	✓		
		B5244SG		✓	✓	✓	✓	✓		
		B6294S2		✓	✓	✓	✓	✓		
		B5244S2		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T3		✓	✓	✓	✓	✓		
		B5204T5		✓	✓	✓	✓	✓		
		B5254T4		✓	✓	✓	✓	✓		
		B6294S		✓	✓	✓	✓	✓		
		B5244T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2001	TCM	AW55-50SN 4T65EV-GT AW50-42 AW50/51AWD TF-80SC 4T65EV	AW55-50SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
		ABS SRS Immobilizer VGLA	4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS	√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS	√	√	√	√			
			Immobilizer	√	√	√	√	√		
			VGLA	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)	
		cab control sys		√	√	√	√			
		Rollover protection		√	√	√	√	√		
		CCM		√	√	√	√			
		PSL		√	√	√	√	√		
		PSR		√	√	√	√	√		
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	√	√	√	√	√		
			B6304S3	√	√	√	√	√		
			B6294T	√	√	√	√	√	1.Resetting the adaptation values	
			B6284T	√	√	√	√	√		
			B5204T4	√	√	√	√	√		
			B5204T3	√	√	√	√	√		
			B5244SG	√	√	√	√	√		
			B6294S2	√	√	√	√	√		
			B5244S2	√	√	√	√	√		
			B5254T2	√	√	√	√	√	1.Resetting the adaptation values	
			B5234T3	√	√	√	√	√		
			B5204T5	√	√	√	√	√		
			B5254T4	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
C70 Conv	2002	TCM	B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		cab control sys		✓	✓	✓	✓			
		Rollover protection		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5244S	✓	✓	✓	✓	✓		
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2003	TCM		B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			AW55-50SN						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			
		Immobilizer		√	√	√	√	√		
		VGLA		√	√	√	√	√		
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)	
		cab control sys		√	√	√	√			
		Rollover protection		√	√	√	√	√		
		CCM		√	√	√	√			
		PSL		√	√	√	√	√		
		PSR		√	√	√	√	√		
		CPM		√	√	√	√	√		
		RTI		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2004	ECM	B6294S2	✓	✓	✓	✓	✓			
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
	TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
		4T65EV	✓	✓	✓	✓	✓	✓		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS	✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Reseting the service reminder indicator(SRI)	
		cab control sys		✓	✓	✓	✓			
		Rollover protection		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		
		CPM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		✓	✓	✓	✓	✓		
		B6304S3		✓	✓	✓	✓	✓		
		B6294T		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B6284T		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005	2005	ECM	B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others	
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC	
			4T65EV	√	√	√	√	√		Read Extend DTC	
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC	
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC	
		SRS		√	√	√	√				
		Immobilizer		√	√	√	√	√			
		VGLA		√	√	√	√	√			
		CI		√	√	√	√	√	1. Reseting the service reminder indicator(SRI)		
		cab control sys		√	√	√	√				
		Rollover protection		√	√	√	√	√			
		CCM		√	√	√	√				
		PSL		√	√	√	√	√			
		PSR		√	√	√	√	√			
		CPM		√	√	√	√	√			
		RTI		√	√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2004	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S7		√	√	√	√	√		
		B4204S3		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5254T7		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5204T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		√	√	√	√	√	1.Resetting the adaptation values	
		B5244T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B4184S11		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S7		√	√	√	√	√		
		B4204S3		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5254T7		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5204T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2006	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓	1.Programming the infotainment control module(ICM)	Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2007	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
V50		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		√	√	√	√	√	1.Resetting the adaptation values	
		B5244S7		√	√	√	√	√		
		B4204S3		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5254T7		√	√	√	√	√	1.Adaptation of the throttle unit(*)	
		B5204T5		√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			B6294T	√	√	√	√	√	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	√	√	√	√	√	1.Resetting the adaptation values	
			B5244T5	√	√	√	√	√	1.Adaptation of the throttle unit(*)	
			B4184S11	√	√	√	√	√	1.Resetting the adaptation values	Read Extend DTC
			D5244T	√	√	√	√	√	1.Programming the optimizing parameters(*)	
			D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2008	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		HCM		✓	✓	✓	✓			
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2009	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		HCM		✓	✓	✓	✓			
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2010	TCM	D4164T	✓	✓	✓	✓	✓	✓	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
									1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
		TF-80SC	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		ShortTest							search all system and DTC(s) of vehicle	
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS	√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS	√	√	√	√			Read Extend DTC
			CEM	√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
			UEM	√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
			REM	√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2001	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S	✓	✓	✓	✓	✓			
		B6304S3	✓	✓	✓	✓	✓			
		B6294T	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B6284T	✓	✓	✓	✓	✓			
		B5204T4	✓	✓	✓	✓	✓			
		B5204T3	✓	✓	✓	✓	✓			
		B5244SG	✓	✓	✓	✓	✓			
		B6294S2	✓	✓	✓	✓	✓			
		B5244S2	✓	✓	✓	✓	✓			
		B5254T2	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T3	✓	✓	✓	✓	✓			
		B5204T5	✓	✓	✓	✓	✓			
		B5254T4	✓	✓	✓	✓	✓			
		B6294S	✓	✓	✓	✓	✓			
		B5244T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		B5234T7	✓	✓	✓	✓	✓		1.Resetting the adaptation values	
		AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2002	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		SWM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		ETM		√			√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
General Service	ECM	B5244S							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B6304S3	✓	✓	✓	✓	✓		
			B6294T	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B6284T	✓	✓	✓	✓	✓		
			B5204T4	✓	✓	✓	✓	✓		
			B5204T3	✓	✓	✓	✓	✓		
			B5244SG	✓	✓	✓	✓	✓		
			B6294S2	✓	✓	✓	✓	✓		
			B5244S2	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T3	✓	✓	✓	✓	✓		
			B5204T5	✓	✓	✓	✓	✓		
			B5254T4	✓	✓	✓	✓	✓		
			B6294S	✓	✓	✓	✓	✓		
			B5244T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5234T7	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
Diesel Eng	D5244T	D5244T							1.Programming the optimizing parameters(*)	
			D5252T	✓	✓	✓	✓	✓	1.Programming the idle speed	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	√	√	√	√	√		Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS		√	√	√	√	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS		√	√	√	√		Read Extend DTC
			CEM		√	√	√	√	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
			UEM		√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2003	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
										Read Extend DTC
		CPM		√				√	1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ETM		√			√			
ECM		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
Diesel Eng		B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	
		D5244T		√	√	√	√	√	1.Programming the optimizing parameters(*)	
		D5252T		√	√	√	√	√	1.Programming the idle speed	
		AW55-50SN		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓			Read Extend DTC
		CEM		✓	✓	✓	✓	✓	1.Reading alarm cause(*) 2.Resetting the factory settings	Read Extend DTC
		UEM		✓	✓	✓	✓	✓	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2004	DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
									1.Reinstalling the reserve battery	Read Extend DTC
										Read Extend DTC
										Read Extend DTC
CPM				√				√	1.Programming the additional and parking heater	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ETM		√			√			
ECM	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7	✓	✓	✓	✓	✓			
		B4204S3	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5	✓	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11	✓	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T	✓	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
V70 XC(01-)/XC70(-07)		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2005	2005	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2006	2006	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2007	2007	TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC
		UEM		√	√	√	√	√	1.Configuration of the siren 2.Programming the control unit 3.Reading the programmed values	Read Extend DTC
		REM		√	√	√	√	√	1.Calibrating the position sensor for Bi-Xenon lamps	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		PSM		√	√	√	√	√		Read Extend DTC
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		CCM		√	√	√	√	√	1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC
		PHM		√	√	√	√		1.Reinstalling the reserve battery	Read Extend DTC
		AUM		√	√	√	√			Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		SAS		√	√	√	√			
		RTI		√	√	√				Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		CPM		√			√		1.Programming the additional and parking heater	
		HCM		√	√	√			Calibration of position sensor	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T16	√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
			ABS	√	√	√	√	√	1.Calibration	
			SRS	√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
			CEM	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2008		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder		
		PDM		√	√	√	√	√			
		PSM		√	√	√	√	√			
		DDM		√	√	√	√				

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment		
			AUD	✓	✓	✓					
			DEM	✓	✓	✓	✓	✓			
			ICM	✓	✓	✓	✓	✓			
			SAS	✓	✓	✓	✓				
			MMM	✓	✓	✓					
			PAM	✓	✓	✓	✓				
			IAM	✓	✓	✓					
			BPM	✓	✓	✓	✓				
			SUM	✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
XC70(08-)	2009	SRS		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
				√	√	√	√	√		
		CEM		√	√	√	√			
				√	√	√	√			
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
				√	√	√	√			
		PDM		√	√	√	√	√		
		PSM		√	√	√	√	√		
		DDM		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment	
			AUD	✓	✓	✓				
			DEM	✓	✓	✓	✓	✓		
			ICM	✓	✓	✓	✓	✓		
			SAS	✓	✓	✓	✓			
			MMM	✓	✓	✓				
			PAM	✓	✓	✓	✓			
			IAM	✓	✓	✓				
			BPM	✓	✓	✓	✓			
			SUM	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2010	SRS	CEM		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
				√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
	PDM			√	√	√	√	√		
	PSM			√	√	√	√	√		
	DDM			√	√	√	√			
	ECM			√	√	√	√			
	PCM			√	√	√	√			
	TCU			√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
			CCM	✓	✓	✓	✓	✓	1. Reading-out programmed parameters 2. Calibrating the Climate Control Module (CCM) 3. Identifying the Damper Motor Module (DMM) 4. Programming the climate control module (CCM) 5. Reading out electronic damper motor, actual/ preset range and tolerance limit 6. Programming the evaporator, climate control module (CCM) 7. Compartment fan afterblow 8. Airflow setting in rear passenger compartment		
			AUD	✓	✓	✓					
			DEM	✓	✓	✓	✓	✓			
			ICM	✓	✓	✓	✓	✓			
			SAS	✓	✓	✓	✓				
			MMM	✓	✓	✓					
			PAM	✓	✓	✓	✓				
			IAM	✓	✓	✓					
			BPM	✓	✓	✓	✓				
			SUM	✓	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
	1998	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	D5252T MSA 15.7	√	√	√	√			
		TCM	AW50-42	√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√	√			
		Combi		√	√	√	√		1.Oil lamp reset(*)	
		Immobilizer		√	√	√	√			
		VGLA		√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM		PSL		√	√	√	√			
		PSR		√	√	√	√			
		RTI		√	√	√	√	√		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		√	√	√	√	√		
		B6304S3		√	√	√	√	√		
		B6294T		√	√	√	√	√	1.Resetting the adaptation values	
		B6284T		√	√	√	√	√		
		B5204T4		√	√	√	√	√		
		B5204T3		√	√	√	√	√		
		B5244SG		√	√	√	√	√		
		B6294S2		√	√	√	√	√		
		B5244S2		√	√	√	√	√		
		B5254T2		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T3		√	√	√	√	√		
		B5204T5		√	√	√	√	√		
		B5254T4		√	√	√	√	√		
		B6294S		√	√	√	√	√		
		B5244T7		√	√	√	√	√	1.Resetting the adaptation values	
		B5234T7		√	√	√	√	√	1.Resetting the adaptation values	
		AW55-50SN		√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
V70 XC(-00)	1999	TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		✓	✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
		SRS		✓	✓	✓	✓	✓		Read Extend DTC
		Immobilizer		✓	✓	✓	✓	✓		
		VGLA		✓	✓	✓	✓	✓		
		CI		✓	✓	✓	✓	✓	1. Resetting the service reminder indicator(SRI)	
		PSL		✓	✓	✓	✓	✓		
		PSR		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM		CPM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S		✓	✓	✓	✓	✓		
		B6304S3		✓	✓	✓	✓	✓		
		B6294T		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B6284T		✓	✓	✓	✓	✓		
		B5204T4		✓	✓	✓	✓	✓		
		B5204T3		✓	✓	✓	✓	✓		
		B5244SG		✓	✓	✓	✓	✓		
		B6294S2		✓	✓	✓	✓	✓		
		B5244S2		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T3		✓	✓	✓	✓	✓		
		B5204T5		✓	✓	✓	✓	✓		
		B5254T4		✓	✓	✓	✓	✓		
		B6294S		✓	✓	✓	✓	✓		
		B5244T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5234T7		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		AW55-50SN		✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2000		TCM	4T65EV-GT	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			TF-80SC	✓	✓	✓	✓	✓	1.Resetting the adaptation 2.Resetting the Transmission fluid change counter	Read Extend DTC
			4T65EV	✓	✓	✓	✓	✓		Read Extend DTC
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
			ABS		✓	✓	✓	✓	1.Checking brake light switch adjustment(*) 2.Calibration	Read Extend DTC
			SRS		✓	✓	✓	✓		Read Extend DTC
			Immobilizer		✓	✓	✓	✓		
			VGLA		✓	✓	✓	✓		
			CI		✓	✓	✓	✓	1. Resetting the service reminder indicator(SRI)	
			PSL		✓	✓	✓	✓		
			PSR		✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

Vehicle Model	Year	System	Type	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
		CPM		✓	✓	✓	✓	✓		
		CCM		✓	✓	✓	✓	✓		
		RTI		✓	✓	✓	✓	✓		
V90	1997	ECM		✓	✓	✓	✓			
		TCM		✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓					1.Oil lamp reset(*)	
		Immobilizer		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		RTI		✓	✓	✓	✓	✓		
	1998	ECM		✓	✓	✓	✓			
		TCM		✓	✓	✓	✓			
		ABS		✓	✓	✓	✓	✓		
		SRS		✓	✓	✓	✓			
		IC		✓					1.Oil lamp reset(*)	
		Immobilizer		✓	✓	✓	✓			
		PSL		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		RTI		✓	✓	✓	✓	✓		
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2007	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2008	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
C30		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	2009	ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
				√	√	√	√			Read Extend DTC
		CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		ECM	B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	
			D5244T4	✓	✓	✓	✓	✓	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
TCM			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC
		AW55-50/51SN	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		TF-80SC	TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
		AW50/51AWD	AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
2010	ABS			√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
			SRS	√	√	√	√			Read Extend DTC
	CEM			√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		✓	✓	✓	✓	✓	1.Initialize the window(*)	
		SWM		✓	✓	✓	✓			
		PSM		✓	✓	✓	✓	✓		Read Extend DTC
		PHM		✓	✓	✓	✓	✓	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		✓	✓	✓				Read Extend DTC
		DEM		✓	✓	✓	✓			Read Extend DTC
		ICM		✓	✓	✓	✓	✓		Read Extend DTC
		MMM		✓	✓	✓	✓			Read Extend DTC
		AEM		✓	✓	✓	✓	✓		Read Extend DTC
		ADM		✓	✓	✓	✓			Read Extend DTC
		EPS		✓	✓	✓	✓			Read Extend DTC
		PAM		✓	✓	✓	✓			Read Extend DTC
		IAM		✓	✓	✓	✓	✓		Read Extend DTC
		AFM		✓	✓	✓	✓	✓		Read Extend DTC
		MPM		✓	✓	✓	✓	✓		Read Extend DTC
		CPM		✓	✓	✓	✓	✓		
		HCM		✓	✓	✓			Calibration of position sensor	
		KVM		✓	✓	✓	✓	✓		
		RDAR		✓	✓	✓	✓			
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		PSR		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
			B5244S4	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			B5244S5	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244S7	✓	✓	✓	✓	✓		
			B4204S3	✓	✓	✓	✓	✓		
			B5254T2	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B5254T3	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5254T7	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B5204T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B6294T	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
			B4164S3	✓	✓	✓	✓	✓	1.Resetting the adaptation values	
			B5244T5	✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
			B4184S11	✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
			D5244T	✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2006	CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		CRM		√	√	√	√			
		GPS		√	√	√	√			
		SUB		√	√	√				
		TMC		√	√	√	√			
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM	SUB	SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
	General Service	General							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
	ECM	B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2007	CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		CRM		√	√	√	√			
		GPS		√	√	√	√			
		SUB		√	√	√				
		TMC		√	√	√	√			
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM	SUB	SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
	General Service	General							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
	ECM	B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
C70(06-)	2008	CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		CRM		√	√	√	√			
		GPS		√	√	√	√			
		SUB		√	√	√				
		TMC		√	√	√	√			
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
ECM	SUB	SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
	General Service	General							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
	ECM	B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2009	CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

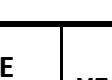
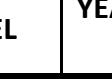
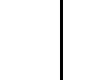
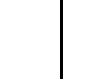
VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		CRM		√	√	√	√			
		GPS		√	√	√	√			
		SUB		√	√	√				
		TMC		√	√	√	√			
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		SUB		✓	✓	✓	✓			
		CVM		✓	✓	✓	✓			
		DABM		✓	✓	✓	✓			
		PAC		✓	✓	✓	✓			
		TRM		✓	✓	✓	✓			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5244S4		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		B5244S5		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244S7		✓	✓	✓	✓	✓		
		B4204S3		✓	✓	✓	✓	✓		
		B5254T2		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B5254T3		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5254T7		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B5204T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B6294T		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	Read Extend DTC
		B4164S3		✓	✓	✓	✓	✓	1.Resetting the adaptation values	
		B5244T5		✓	✓	✓	✓	✓	1.Adaptation of the throttle unit(*)	
		B4184S11		✓	✓	✓	✓	✓	1.Resetting the adaptation values	Read Extend DTC
		D5244T		✓	✓	✓	✓	✓	1.Programming the optimizing parameters(*)	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		Diesel Eng	D5244T4	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D5244T5	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T8	√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Resetting counter oil 4.Adaptation of throttle module 5.Adaptation of swivel channel throttle 6.Adaptation of mass airflow sensor 7.Adaptation of turbo control motor 8.Adaptation of fuel pressure control valve 9.Combustion of soot particles	Read Extend DTC
			D4164T	√	√	√	√	√	1.Resetting the odometer particle trap 2.Adaptation of the exhaust gas recirculation(EGR) valve 3.Combustion of soot particles	
			D4204T	√	√	√	√	√	1.Programming the optimizing parameters(*) 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		TCM	AW55-50/51SN	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	Read Extend DTC
			4T65AWD						1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	
			TF-80SC	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*) 3.Calibration of position sensor	
			AW50/51AWD	√	√	√	√	√	1.Reset adaptation to zero(*) 2.Resetting the counter for – Gearbox oil Change(*)	Read Extend DTC
		ABS		√	√	√	√	√	1.Checking brake light switch adjustment(*) 2.Reading off the configuration 3.Calibration	Read Extend DTC
		SRS		√	√	√	√			Read Extend DTC

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
	2010	CEM		√	√	√	√	√	1.Calibration of position sensor, GDL lamps(*) 2.Programming control module 3.Resetting the factory settings 4.Resetting low voltage counters 5.Resetting crash mode 6.Programming of rear window wiper when reversing 7.Reading off and programming vehicle mode 8.Programming of short flash sequence 9.Ignition switch key position	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		CCM		√	√	√	√		1.Self-adjustment of adamper motor end stops(*) 2.Reading-out programmed parameters(*) 3.Calibrating the Climate Control Module (CCM) 4.Identifying the Damper Motor Module (DMM) 5.Programming the climate control module (CCM) 6.Reading out electronic damper motor,actual/ preset range and tolerance limit 7.Programming the seat temperature	Read Extend DTC	
		DDM		√	√	√	√	√	1.Initialize the window(*)		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
		DIM		√	√	√	√	√	1. Reseting the service reminder indicator(SRI) (*) 2. Testing all displays and lamps in instrument (*) 3. Programming the distance covered for service (*) 4. Programming the service time parameters (*) 5. Programming the engine service time parameters (*) 6. Programming units of measurement for temperature (*) 7. Programming of trip computer unit (*) 8. Programming of clock (*) 9. Programming of zeros (*) 10.Programming parking brake warning 11.Programming the audible acknowledgement signal,seat belt reminder 12.Programming instrument lighting 13.Programming text message,seatbelt reminder 14.Display of DSTC message 15.Read out programmed values	Read Extend DTC	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PDM		√	√	√	√	√	1.Initialize the window(*)	
		DDM		√	√	√	√	√	1.Initialize the window(*)	Read Extend DTC
		SWM		√	√	√	√			
		PSM		√	√	√	√	√		Read Extend DTC
		PSL		√	√	√	√			
		PSR		√	√	√	√			
		PHM		√	√	√	√	√	1.Reinstalling the reserve battery	Read Extend DTC
		AUD		√	√	√				Read Extend DTC
		DEM		√	√	√	√			Read Extend DTC
		ICM		√	√	√	√	√		Read Extend DTC
		MMM		√	√	√	√			Read Extend DTC
		AEM		√	√	√	√	√		Read Extend DTC
		ADM		√	√	√	√			Read Extend DTC
		EPS		√	√	√	√			Read Extend DTC
		PAM		√	√	√	√			Read Extend DTC
		IAM		√	√	√	√	√		Read Extend DTC
		AFM		√	√	√	√	√		Read Extend DTC
		MPM		√	√	√	√	√		Read Extend DTC
		CPM		√	√	√	√	√		
		CRM		√	√	√	√			
		GPS		√	√	√	√			
		SUB		√	√	√				
		TMC		√	√	√	√			
		HCM		√	√	√			Calibration of position sensor	
		KVM		√	√	√	√	√		
		RDAR		√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		ShortTest							search all system and DTC(s) of vehicle	
	ECM	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		B5254T6		√	√	√	√	√	1.Adaptation of the throttle unit	
		B5254T10		√	√	√	√	√	1.Adaptation of the throttle unit	
		B8444S		√	√	√	√	√	1.Resetting the adaptation values	
		B6304T2		√	√	√	√	√	1.Resetting the adaptation values	
		B6324S		√	√	√	√	√	1.Resetting the adaptation values	
		B6324S2		√	√	√	√	√	1.Resetting the adaptation values	
Diesel Eng		D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
			D5244T16	√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
			TF-80SC	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
			TF-80SC AWD	√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
			ABS	√	√	√	√	√	1.Calibration	
			SRS	√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
			CEM	√	√	√	√	√		

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
2009		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder		
		PDM		√	√	√	√	√			
		PSM		√	√	√	√	√			
		DDM		√	√	√	√				

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions		
									1.Reading-out programmed parameters 2.Calibrating the Climate Control Module (CCM) 3.Identifying the Damper Motor Module (DMM) 4.Programming the climate control module (CCM) 5.Reading out electronic damper motor,actual/ preset range and tolerance limit 6.Programming the evaporator,climate control module (CCM) 7.Compartment fan afterblow 8.Airflow setting in rear passenger compartment		
				✓	✓	✓	✓	✓			
				AUD	✓	✓	✓				
				DEM	✓	✓	✓	✓	✓		
				ICM	✓	✓	✓	✓	✓		
				SAS	✓	✓	✓	✓			
				MMM	✓	✓	✓				
				PAM	✓	✓	✓	✓			
				IAM	✓	✓	✓				
				BPM	✓	✓	✓	✓			
				SUM	✓	✓	✓	✓			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
XC60		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√			
		General Service							1.Resetting the SRL(Service Reminder Lamp)to zero(*)	
		ECM	B5254T6	√	√	√	√	√	1.Adaptation of the throttle unit	
			B5254T10	√	√	√	√	√	1.Adaptation of the throttle unit	
			B8444S	√	√	√	√	√	1.Resetting the adaptation values	
			B6304T2	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S	√	√	√	√	√	1.Resetting the adaptation values	
			B6324S2	√	√	√	√	√	1.Resetting the adaptation values	

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
	Diesel Eng	D5244T5		√	√	√	√	√	1.Resetting counter particle filter 2.Adaptation of differential pressure sensor particle filter 3.Adaptation of throttle module 4.Adaptation of swivel channel throttle 5.Adaptation of mass airflow sensor 6.Adaptation of turbo control motor 7.Adaptation of fuel pressure control valve 8.Combustion of soot particles	
		D5244T16		√	√	√	√	√	1.Resetting counter particle filter 2.Resetting adaptation 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation(EGR) valve 5.Combustion of soot particles	
	TCM	TF-80SC		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor	
		TF-80SC AWD		√	√	√	√	√	1.Resetting the adaptation 2.Calibration of position sensor 3.Resetting the counter for Gearbox oil Change	
	ABS			√	√	√	√	√	1.Calibration	

VOLVO V41.60 Diagnostics List (Note:For reference only)

VOLVO V41.60 Diagnostics List <small>(Note:For reference only)</small>										
Vehicle Model	Year	System	Type	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	
2010	SRS	CEM		√	√	√	√		1.Calibrating the occupant weight sensor 2.Checking the PAD-light	
				√	√	√	√	√		
		DIM		√	√	√	√		1.Reseting the service reminder indicator(SRI) 2.Testing all displays and lamps in instrument 3.Programming the unit for temperature 4.Programming the units for the trip computer 5.Programming of clock 6.Programming the audible acknowledgement signal,seat belt reminder 7.Programming seatbelt reminder in backseat 8.Programming text message,seatbelt reminder	
	PDM			√	√	√	√	√		
	PSM			√	√	√	√	√		
	DDM			√	√	√	√			
	PCM			√	√	√	√			
	TCU			√	√	√	√			
	ECU			√	√	√	√			

VOLVO V41.60 Diagnostics List

(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						Others
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	
			CCM	✓	✓	✓	✓	✓	1.Reading-out programmed parameters 2.Calibrating the Climate Control Module (CCM) 3.Identifying the Damper Motor Module (DMM) 4.Programming the climate control module (CCM) 5.Reading out electronic damper motor,actual/ preset range and tolerance limit 6.Programming the evaporator,climate control module (CCM) 7.Compartment fan afterblow 8.Airflow setting in rear passenger compartment	
			AUD	✓	✓	✓				
			DEM	✓	✓	✓	✓	✓		
			ICM	✓	✓	✓	✓	✓		
			SAS	✓	✓	✓	✓			
			MMM	✓	✓	✓				
			PHM	✓	✓	✓	✓	✓		
			PAM	✓	✓	✓	✓			
			IAM	✓	✓	✓				
			BPM	✓	✓	✓	✓			
			SUM	✓	✓	✓	✓	✓		

VOLVO V41.60 Diagnostics List(Note:For reference only)

VHICLE MODEL	YEAR	SYSTEM	TYPE	Functions						
				Sys. Info.	Read code	Clear code	Data stream	Actuat ion	Special functions	Others
		PBM		√	√	√	√		1.Calibration angle sensor 2.Activation and service 3.Resetting the clutch pedal counter	
		CPM		√	√	√	√	√		
		HCM		√	√	√	√			
		KVM		√	√	√	√			
		HLDF		√	√	√	√			
		POT		√	√	√	√			
		AUU		√	√	√	√			
		FSM		√	√	√	√			
		RDAR		√	√	√	√			
		SUB		√	√	√	√			
		CVM		√	√	√	√			
		DABM		√	√	√	√			
		PAC		√	√	√	√			
		TRM		√	√	√	√	√		

(*):Tested;

(?):Manual on website(www.x431.com)

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	N/A	N/A
OBD 16C	N/A	N/A
VOLVO CAN	Use for the cars of 16-PIN Diagnostic socket	N/A
CANBUS II	Use for the cars of 16-PIN Diagnostic socket	N/A
DIAGUN	N/A	Use for the cars of 16-PIN Diagnostic socket
SUPER 16	Use for the cars of 16-PIN Diagnostic socket	N/A